 
 
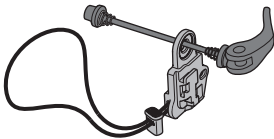 


➤ Instructions

Thule ezHitch

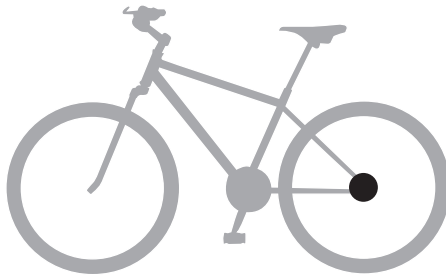

 
 
 
 
 
Thule Axle Mount ezHitch™ Plate
with Quick Release Skewer:
#20201525




 
Thule Axle Mount ezHitch™ Plate:
#20201526




Fixed Axle

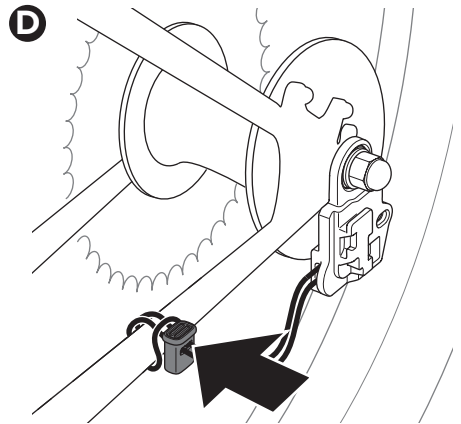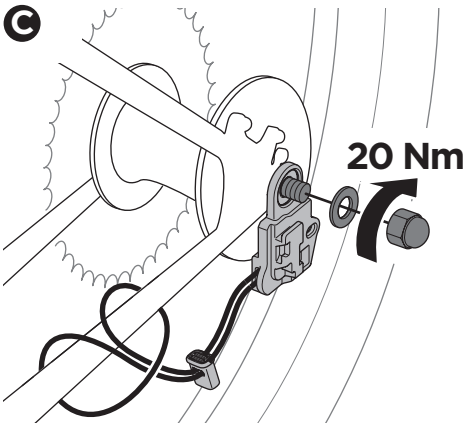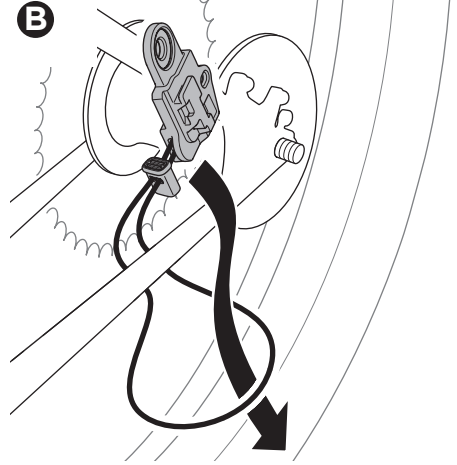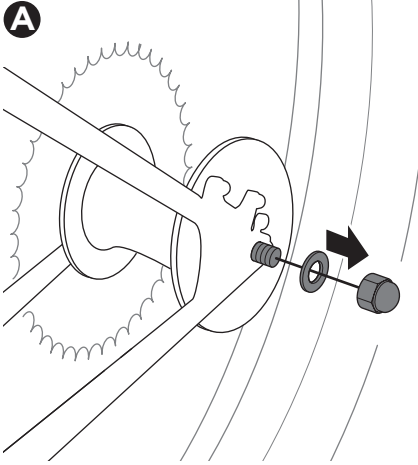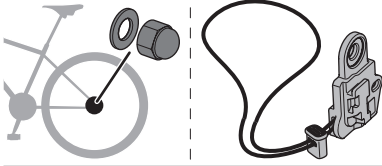


 Thule Internal Hitch Adapter



 thule.com

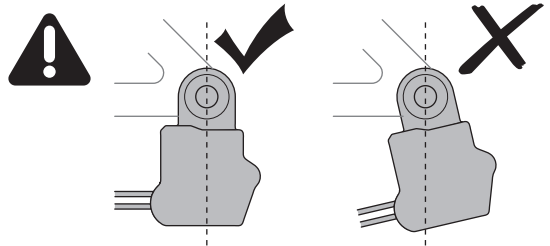


Thru Axle

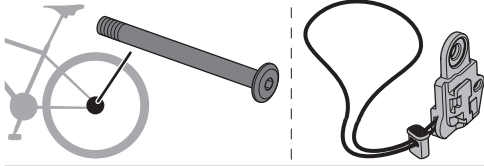 


Thule Thru Axle



 
A

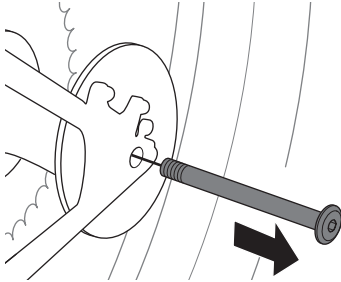


B

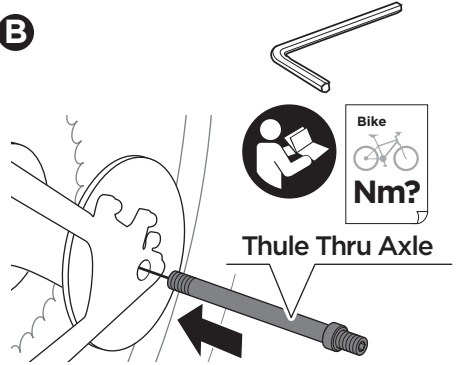 


C

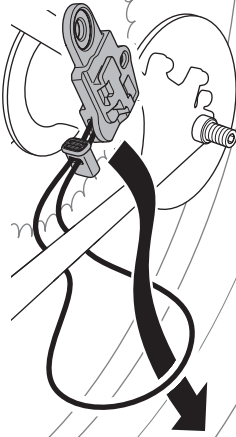 




D

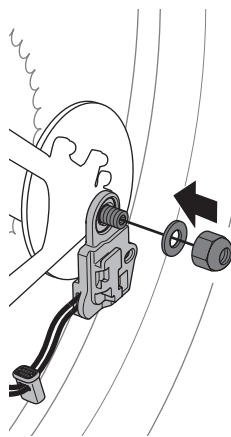 


E

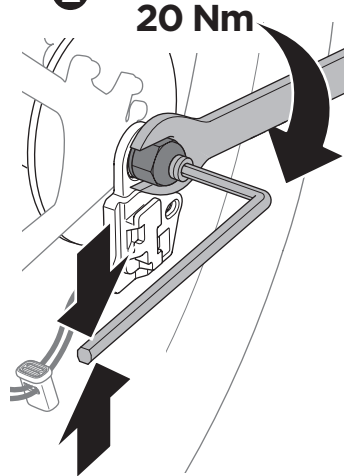 


F

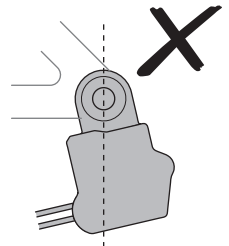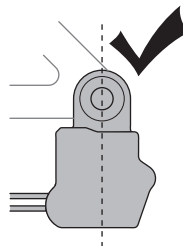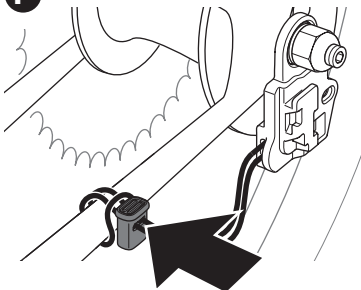   


Quick Release Axle

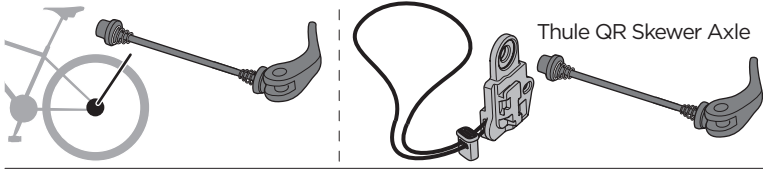 

A

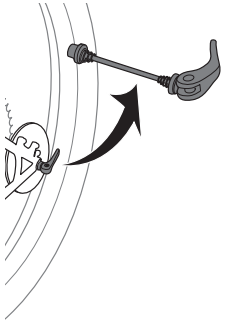 


B

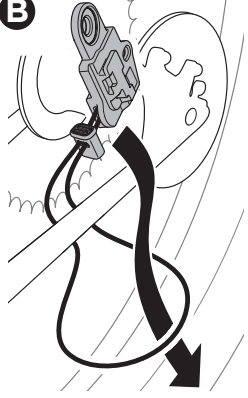 


C

 Thule QR Skewer Axle

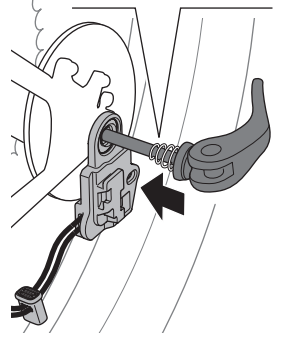


D

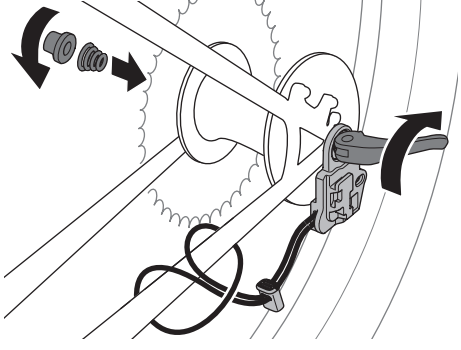 


E


 
"CLOSED"

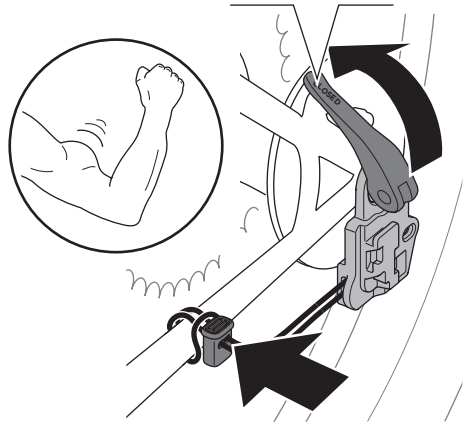

i Thule Drop Out spacer
10mm



  thule.com

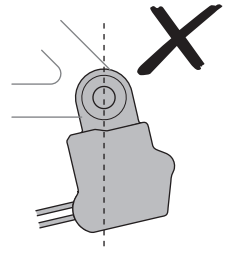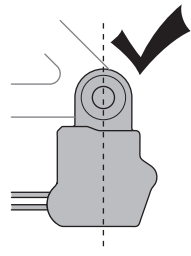

Thule Sweden AB
Borggatan 5
335 73 Hillerstorp, Sweden
info@thule.com
www.thule.com