

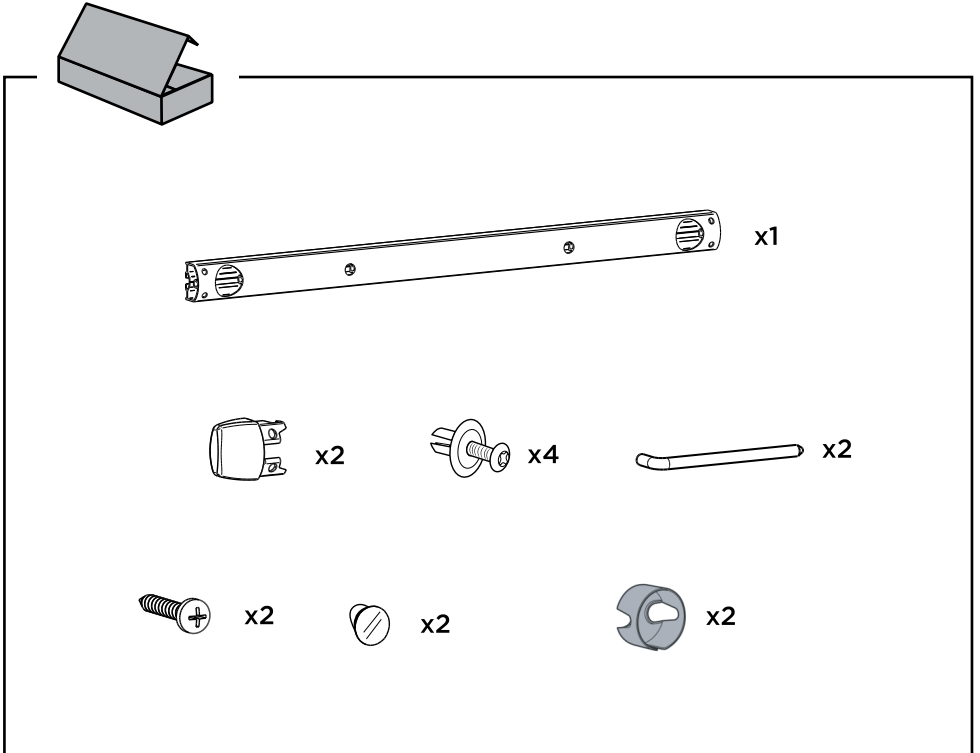
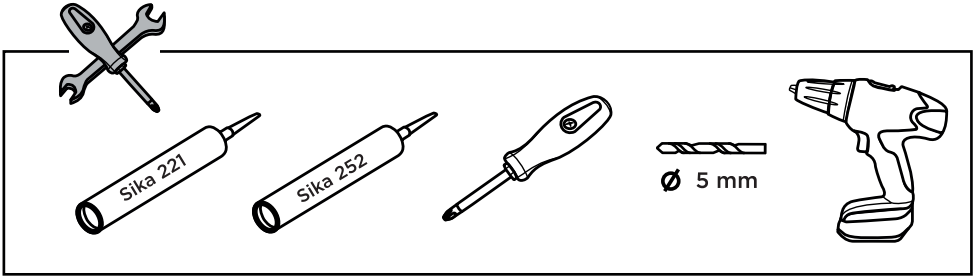


➤ Instructions

Thule Bottom Mounting Rail for Blind Mounting

308954

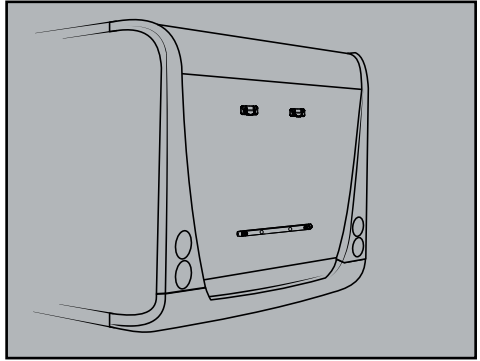

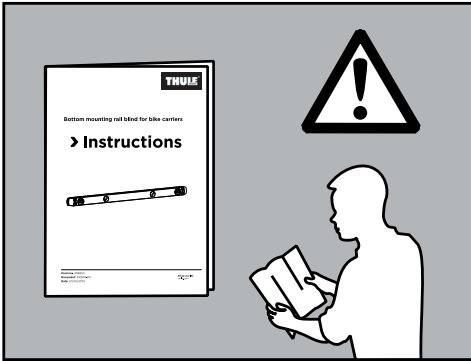

➔ For complete installation, see instructions Bike Carrier

1B



x1




x2




x2

1

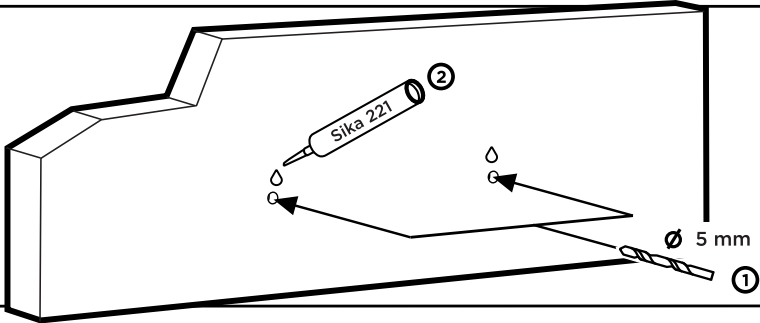


Ø 5 mm

1




3.*

*See technical specifications in Bike carrier manual




600 mm

2

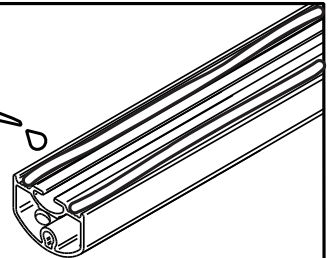

3

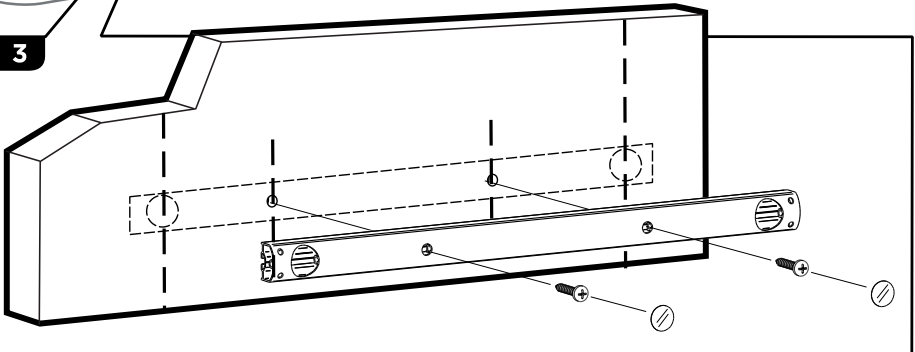

➔ For complete installation, see instructions Bike Carrier

5B



x2



x2



x4





x2



x2

1

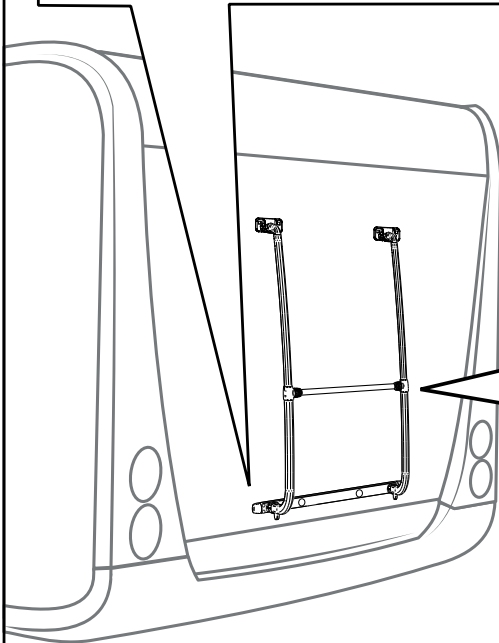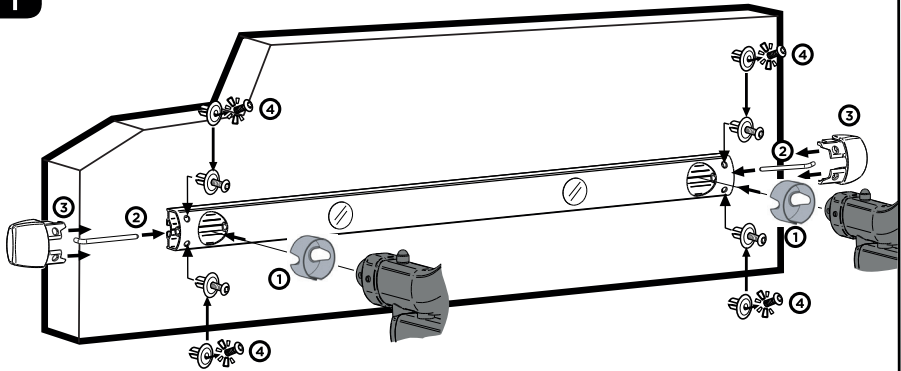

2

