



AWNING INSTALLATION MANUAL

Congratulations on your purchase of a Tepui Awning. We strive to provide the ultimate camping experience for every camper. Your high-quality awning has been designed to fit most roof rack and roof bar systems. This versatile product is built to give you many years of trouble-free service, providing you follow these simple mounting, operating and care instructions.

Your Tepui Awning is made with the most durable materials that will stand up to the most extreme conditions.

Most of your Tepui Awning components have been fully assembled at the factory except for attaching the mounting brackets. Awning setup is composed of unpacking contents, attaching mounting brackets to your vehicle, and then attaching your Tepui Awning to the mounting brackets.

This document also includes instructions for the installation of the Tepui Awning Mosquito Room and Tepui Awning Walls.

Should you have any questions, please email sales@tepui.com or call Customer Service at 1-800-301-9874.



TABLE OF CONTENTS

DELIVERY CONTENTS:

4' & 6' TEPUI AWNING	3
6' MOSQUITO WALLS	3
6' AWNING WALLS	3
AWNING INSTALLATION	4
ATTACHING AWNING MOUNTING BRACKETS:	
TO TEPUI ROOF TENT RAILS	5
TO ROOF RACKS WITHOUT MOUNTING TRACKS	6
TO ROOF RACKS WITH MOUNTING TRACKS	7
DIRECTLY TO A ROOF BASKET	8
TO THE AWNING MOUNTING BRACKETS.....	9
AWNING OPERATION.....	10-12
TEPUI MOSQUITO WALLS	13
TEPUI AWNING WALLS	14
LIMITED WARRANTY	15



DELIVERY CONTENTS

Before you start to affix your awning to your car, take a minute to identify and organize all parts provided.

4' & 6' Tepui Awning

Included in delivery:

- Pre-assembled awning
- 2 x L-shaped mounting brackets
- 6-8 x M6 bolts and nuts (depending on awning model)
- 2 x Ropes and Stakes



6' Mosquito Walls

Included in delivery:

- Mosquito Wall in Bag
- Stakes



6' Awning Walls

Included in delivery:

- Awning Walls
- Awning Floor
- Stakes



AWNING INSTALLATION

Your Tepui Awning comes pre-assembled but needs the mounting brackets installed (in most circumstances) before it is ready to be mounted to your vehicle.

STEP-BY-STEP MOUNTING:

There are multiple ways to mount you Tepui Awning to your vehicle. The awning must first attach to the mounting brackets (pg 9), which are attached to:

- Tepui roof tent rails (pg 5),
- Roof racks without mounting tracks (pg 6),
- Roof racks with mounting tracks (pg 7), or
- Directly to a roof basket (pg 8).

BRACKET POSITIONING:

The position of the mounting brackets has an effect on the height of your awning:



You can adjust the height by installing the brackets facing up or downwards.




Make sure downwards facing brackets are not in the way of your side doors.



ATTACHING AWNING MOUNTING BRACKETS TO TEPUI TENT RAILS


1. Use the groove of the roof tent mounting rail to slide in the mounting brackets with the M6 bolts in place.

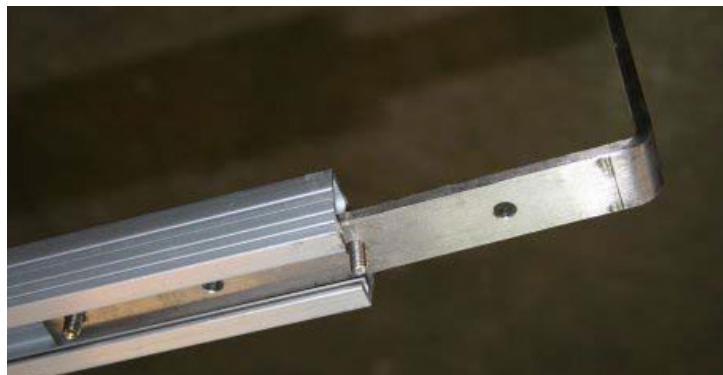

2. The head of the bolt will be held in place from the roof tent mounting rail.



3. Slide them to the desired position and fix the bracket with fitting nuts to the mounting rails.

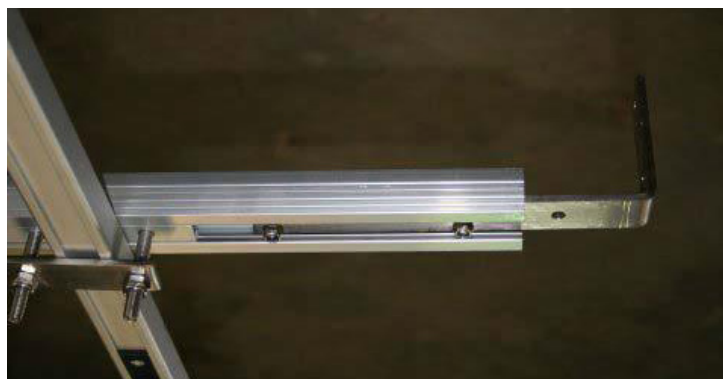

We recommend the use of roof tent mounting rails to attach a Tepui awning to the rear of your car.



ATTACHING AWNING MOUNTING BRACKETS TO ROOF RACKS WITHOUT MOUNTING TRACKS



1. Place the L-brackets on top of your rack.



2. Make sure all L-brackets are aligned and set at the desired distance to your car before you mark the drilling holes on your rack.



3. Drill at least 2 holes for each bracket. We highly recommend taking the racks off your car for this procedure.




4. Bolt the brackets to your rack by using M6 bolts at the necessary length and tensile strength.



Please note, not all factory roof racks or aftermarket roof bars can adequately accommodate drilled holes and/or an awning. Attaching the awning mounting brackets to roof racks without mounting tracks may compromise the integrity of your racks.



ATTACHING AWNING MOUNTING BRACKETS TO ROOF RACKS WITH MOUNTING TRACKS

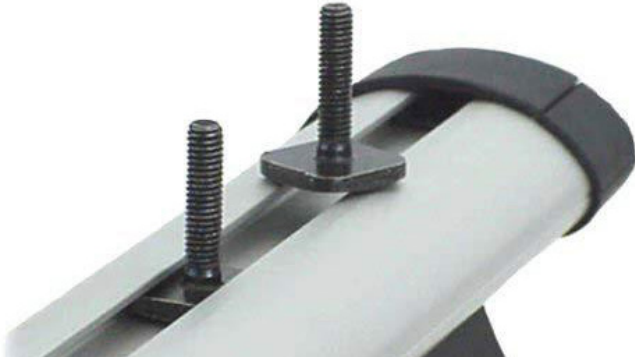

1. Many roof racks have a mounting track system that allows the use of sliding bolts to affix the L-brackets.



2. Make sure the sliding bolts have the necessary size (M6) to fit the mounting brackets. Position the brackets on top of the rack and attach them with washer, split ring and nut.



ATTACHING AWNING MOUNTING BRACKETS DIRECTLY TO A ROOF BASKET

1. You can attach the awning on a vertical surface simply by drilling 4 holes with the desired distance and use the sliding bolts to fix the awning directly to your car/ basket.



Make sure the Awning does not overhang by 18" or more in order to preclude any kind of wobble during driving. It may be necessary to use 3 mounting brackets for long awnings and/or heavy off-road use (contact Tepui for additional brackets). Prepare and choose your roof rack accordingly.

Please note, not all roof baskets can adequately accommodate an awning. Attaching the awning mounting brackets directly to a roof basket may compromise the integrity of the basket.



ATTACHING AWNING TO THE MOUNTING BRACKETS

1. Now that the brackets are in place, put the remaining 4 M6 bolts into the groove of the backside of the awning.



2. Space the bolts to the distance of your mounting brackets on the car.



3. Make sure the awning is the right way around. Use two persons to lift it in place and insert the bolts at the back of the mounting plate to the mounting brackets.



4. Secure the awning to the mounting brackets by tightening the nuts to the M6 bolts.

Tighten all the nuts and make sure your Awning is securely attached. Check the awning before, during and after each trip that it is securely mounted.



AWNING OPERATION

Step-by-step instructions on opening your awning:

1. Choose a serene spot to park your car.
Make sure the surface is flat and not in the risk of falling branches or flooding.



2. Open the travel cover and release the straps.



3. Unroll the awning completely and hold it in place. If someone is available, use two persons. One person to hold the awning in place while the other is installing the frame work.



4. All poles are hinged and telescopic. They lock and unlock with a slight twist. Unfold the horizontal poles.



(AWNING OPERATION CONT'D)

5. Feed the poles into the designated opening on the outer frame and extend them to tension the awning material.



6. Unfold the vertical poles and put them on the ground.



7. Lock them at the desired height with a slight twist movement.



8. Fix the awning material to the frame with the Velcro fasteners.



(AWNING OPERATION CONT'D)

9. Use ropes and stakes to fix the awning securely to the ground.



10. During rain and unsupervised periods, always lower one leg to allow rainwater to run off the awning and avoid pooling.



That's it! You're ready to enjoy the shade!



TEPUI MOSQUITO WALLS

1. Feed the outer zip flap into the channel track of the awning. This part needs to be inserted for the first assembly and can remain on the awning thereafter.



2. Slide the mosquito net into the channel track at the bottom of the awning mounting plate.



3. Zip the other side of the awning to the zip flap you installed at the very beginning.



4. Affix the mosquito net to the side poles of the awning with the clip connectors.



5. Stake the mosquito net to the ground.



TEPUI AWNING WALLS

1. Feed the outer zip flap into the channel track of the awning. This part needs to be inserted for the first assembly and can remain on the awning thereafter.



2. Zip floor onto walls. It is easier to do this prior to attaching wall to awning.



3. Slide the awning wall into the channel track at the bottom of the awning mounting plate.



LIMITED WARRANTY

WHAT IS COVERED

Tepui Outdoors, Inc., producer of Tepui Tents, warrants to the original purchaser that its products are free from defects in material and workmanship, for the term described, except as qualified below. The life of the product is determined from the date of purchase until such time as the product is no longer serviceable due to normal wear and tear.

WHAT IS NOT COVERED

Tepui Outdoors, Inc. shall not be responsible for the natural breakdown of materials that occurs inevitably with extended use (e.g., Ultra Violet (UV) light damage on tents, exhausted zippers), or defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care.

THERE ARE NO OTHER EXPRESS WARRANTIES BEYOND THE TERMS OF THIS LIMITED WARRANTY. IN NO EVENT SHALL Tepui Outdoors, Inc. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WHAT TEPUI OUTDOORS, INC. WILL DO

If after inspection we find that a product failed due to a manufacturing or material defect, we will repair or replace the product, at our option, without charge.

HOW TO OBTAIN WARRANTY SERVICE

Return the product, freight prepaid, to the Tepui Tents Dealer from whom it was purchased; or, contact Tepui Tent's Customer Satisfaction Department for return authorization: toll free 1-800-301-9874. Collect shipments or shipments without return authorization cannot be accepted.

REPAIRS

If your tent needs service or repair due to normal wear and tear, animal attack, accident or some other reason that is not covered under the warranty, we will provide the necessary service for a reasonable charge, plus shipping and handling. We require that products accepted for any repair be properly cleaned according to our recommended care instructions. Please send your product or component that requires repair (e.g., tent fly), postage prepaid, along with a description of what needs attention. For service and repairs, please contact our Customer Satisfaction Department: toll free 1-800-301-9874.

HOW STATE LAW RELATES TO THIS WARRANTY

This warranty gives you specific legal rights. You may have other rights that vary from state to state.

WARRANTY TERM

Limited 2 year warranty applies to all tent components including base, aluminum poles, ladder, fabric and seams.





Tepui Outdoors, Inc.

2500 Rosedale Avenue

Soquel, CA 95073

1-800-301-9874