

# 1

## Kit 187043












**CITROËN Dispatch**, 4-dr Van, 07-16  
**CITROËN Dispatch**, 5-dr Van, 07-16  
**CITROËN Jumpy**, 4-dr Van, 07-16  
**CITROËN Jumpy**, 5-dr Van, 07-16  
**FIAT Scudo**, 4-dr Van, 07-16

**FIAT Scudo**, 5-dr Van, 07-16  
**PEUGEOT Expert**, 4-dr Van, 07-16  
**PEUGEOT Expert**, 5-dr Van, 07-16  
**TOYOTA Proace**, 4-dr Van, 13-16  
**TOYOTA Proace**, 5-dr Van, 13-16




ISO 11154-E


This kit is only for vehicles with fixpoint mounting.

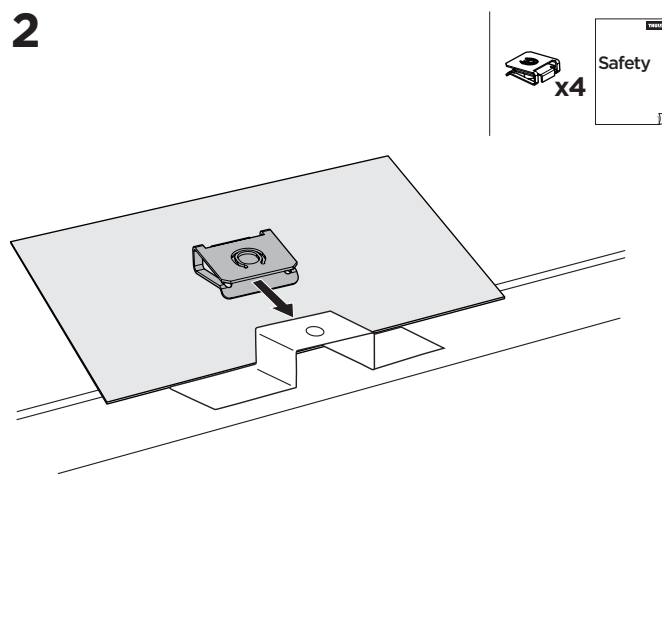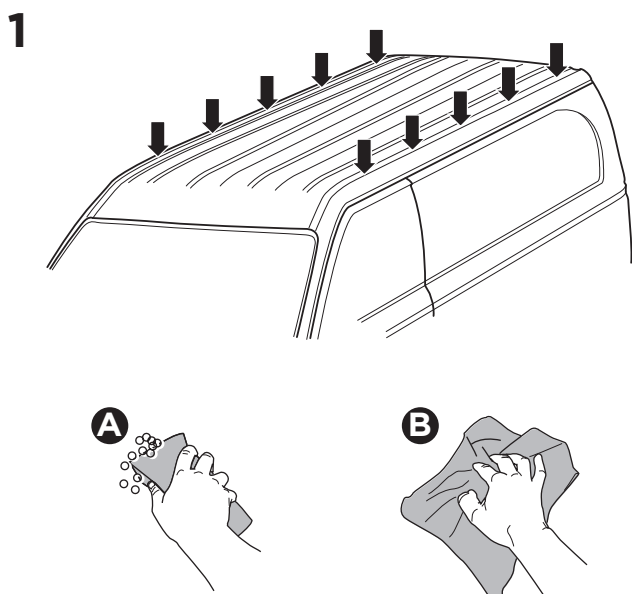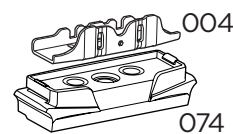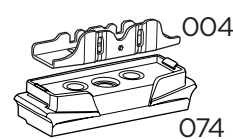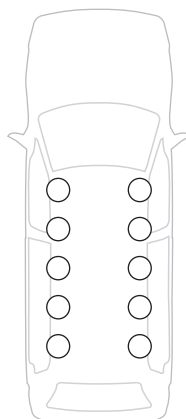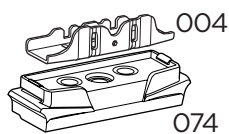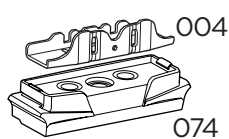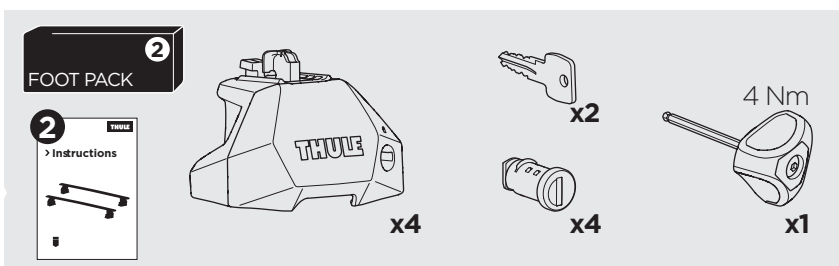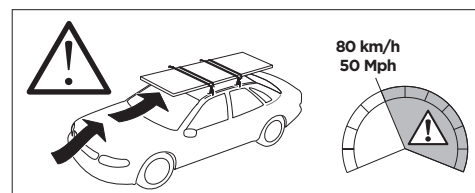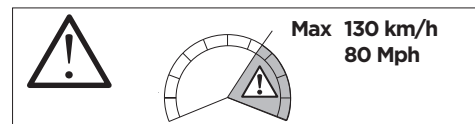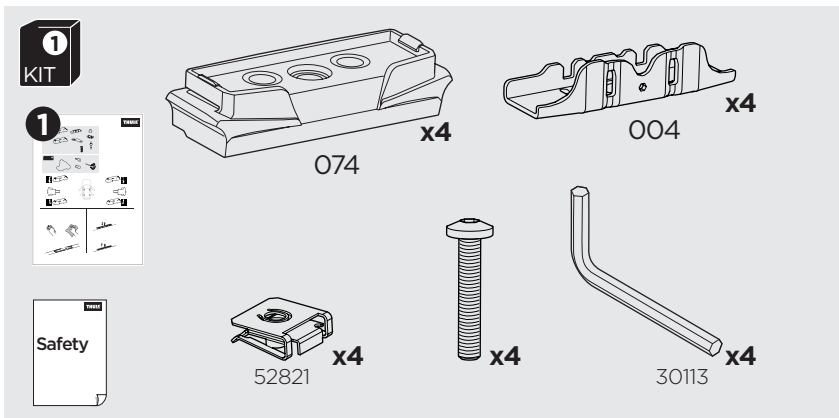


3

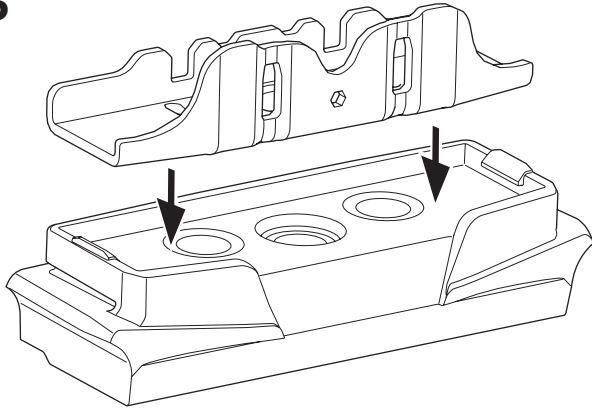


4

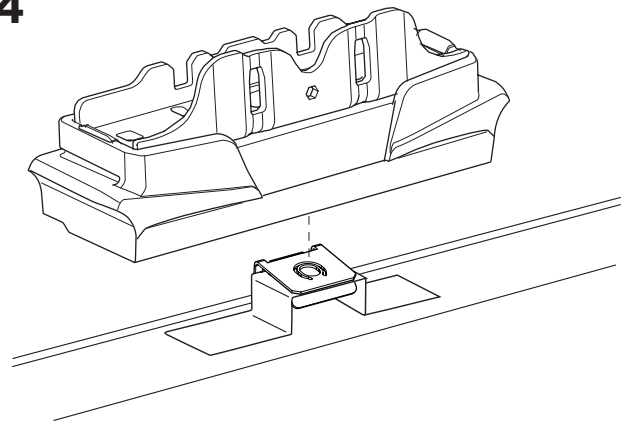

5

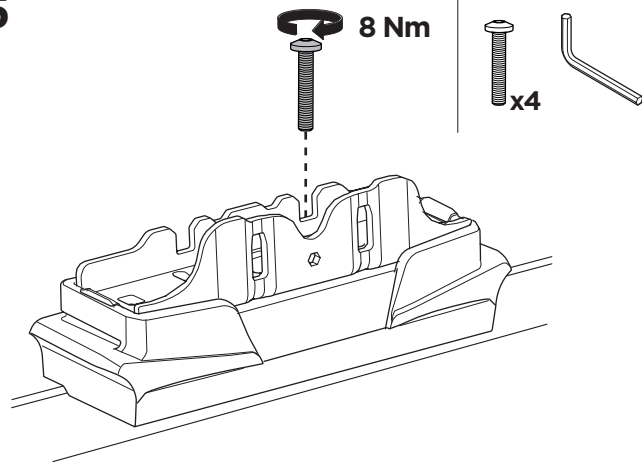


6

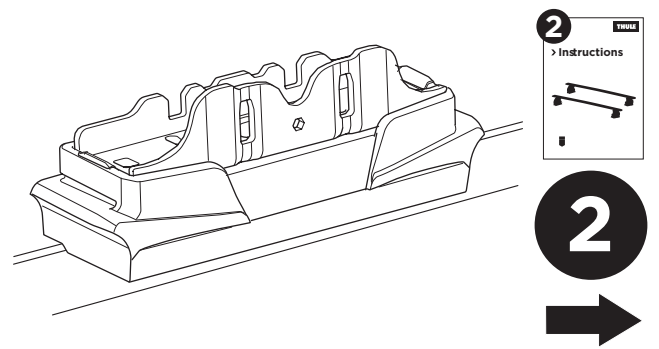

i



A

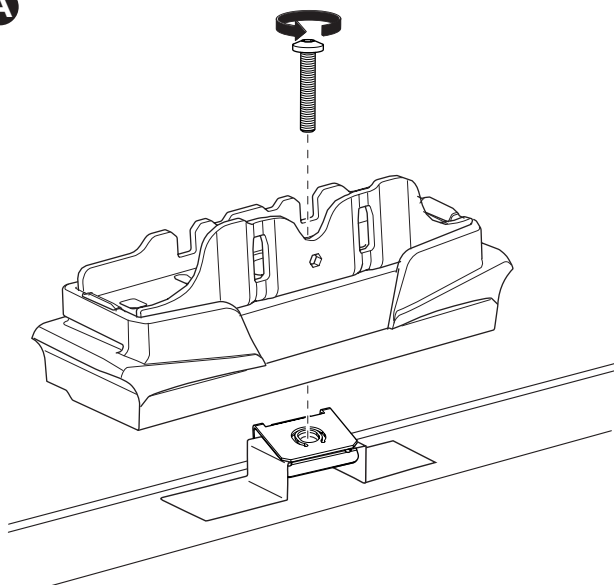

B

