
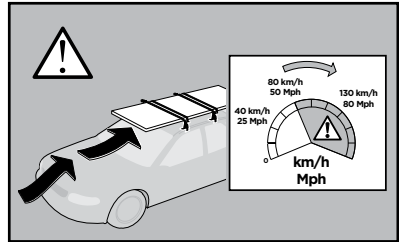
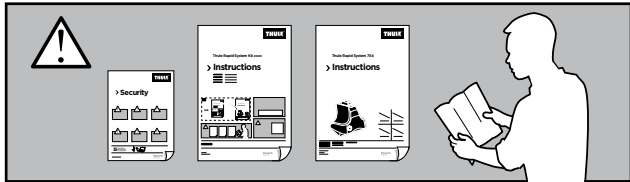
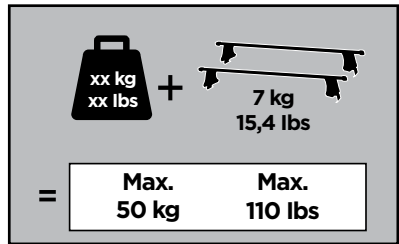


# Thule Rapid System Kit 1692

# > Instructions

FORD Fusion, 4-dr Sedan, 13-





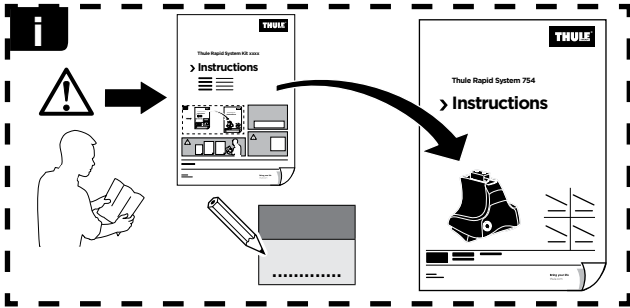


ISO 11154-E

141692



C.20120911  
519-1692-01

Bring your life  
thule.com

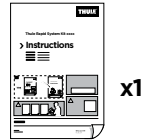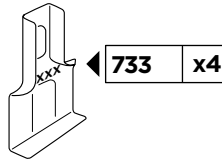

1



	X (scale)	X (mm)	X (inch)
<b>FORD Fusion, 4-dr Sedan, 13-</b>	<b>47,5</b>	<b>1126</b>	<b>44 <sup>3</sup>/<sub>8</sub></b>

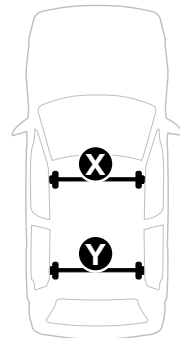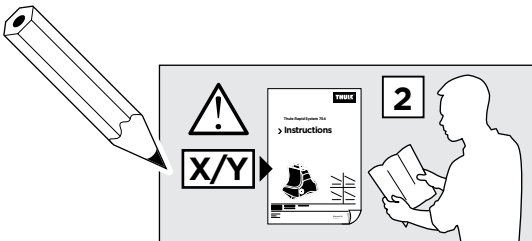


	Y (scale)	Y (mm)	Y (inch)
<b>FORD Fusion, 4-dr Sedan, 13-</b>	<b>46,5</b>	<b>1116</b>	<b>43 <sup>7</sup>/<sub>8</sub></b>

# 2

FORD Fusion, 4-dr Sedan, 13-

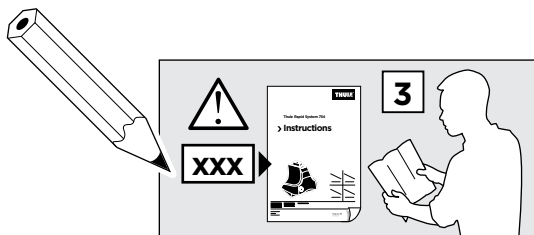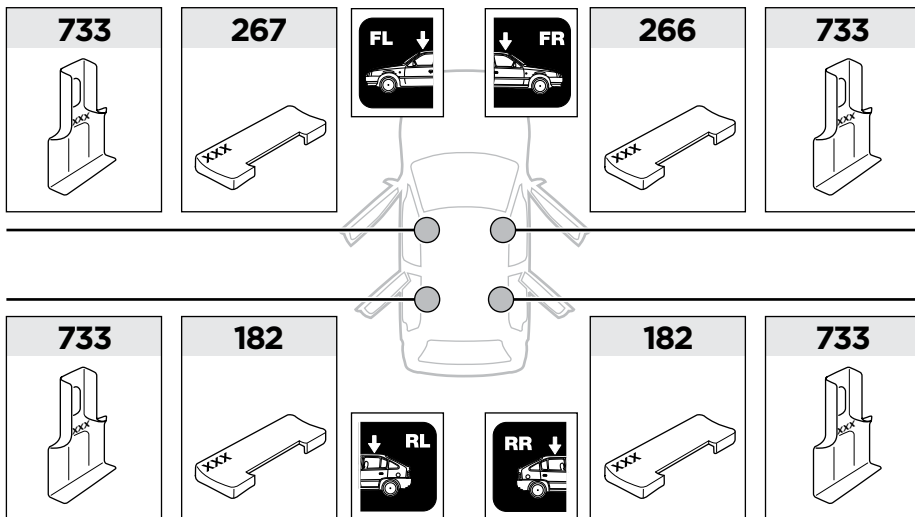

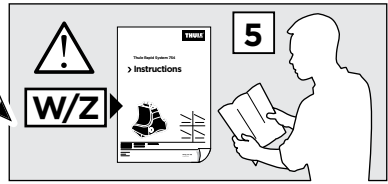**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>FORD Fusion, 4-dr Sedan, 13-</b>	<b>279</b>	<b>635</b>	<b>11</b>	<b>25</b>

