



## Thule XT Kit 3066

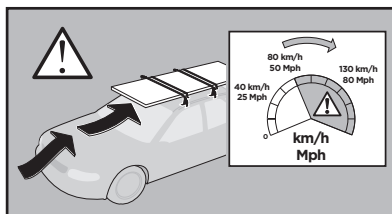
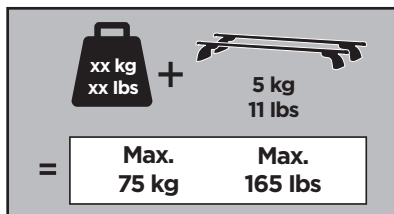
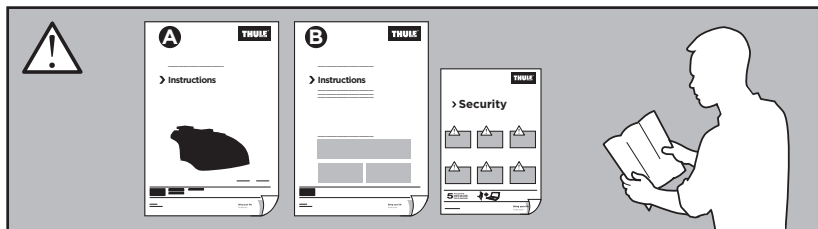
# > Instructions

**MERCEDES A-Class (C169)**, 3-dr Hatchback, 05-11

**MERCEDES A-Class (W169)**, 5-dr Hatchback, 05-11

**MERCEDES B-Class (W245)**, 5-dr Hatchback, 05-10

This kit is only for vehicles with fixpoint mounting.

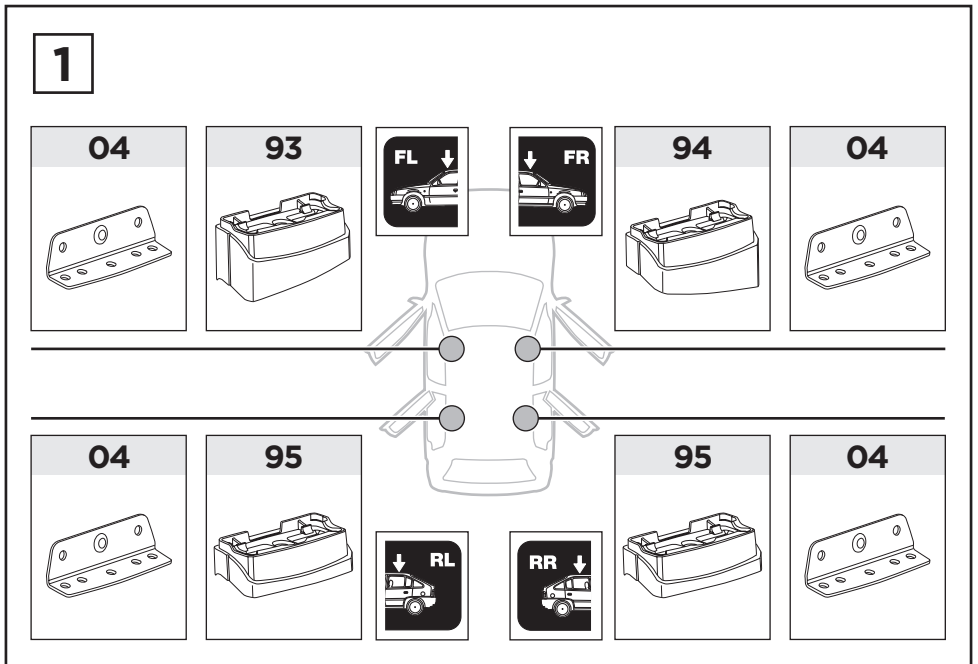
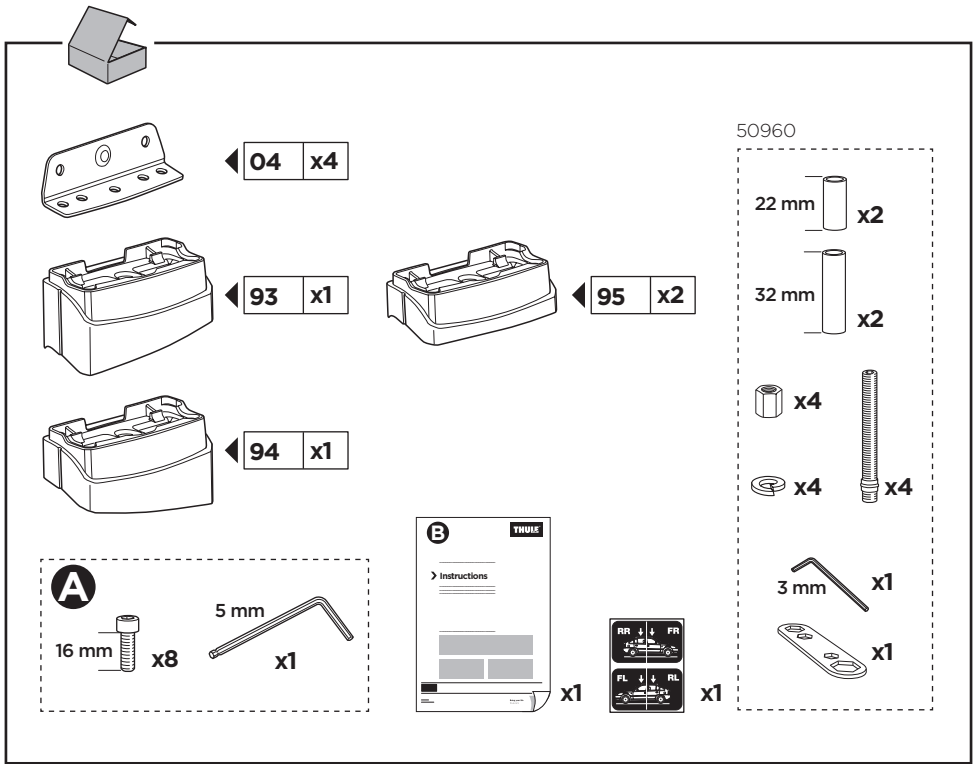


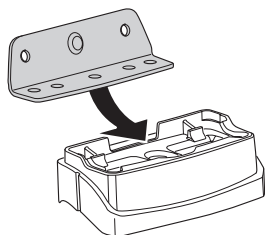

ISO 11154-E

183066

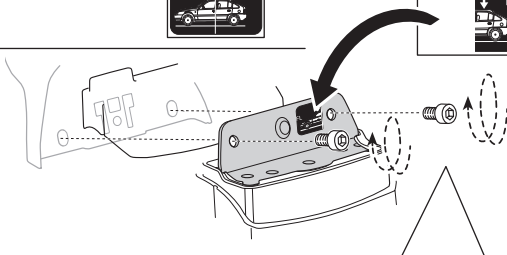

C.20130424  
509-3066-02

Bring your life  
thule.com



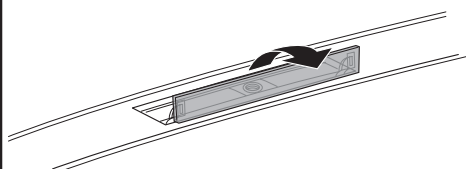
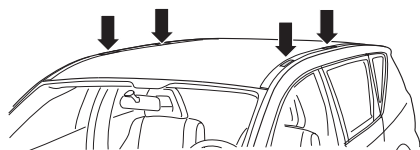


**2 A****B** **A** 16 mm  x8

x1

**EN** Only a few turns**DE** Nur wenige Umdrehungen**FR** Quelques tours uniquement**NL** Slechts enkele slagen**IT** Solo qualche giro**ES** Sólo algunas vueltas**PT** Noções básicas**SV** Endast några varv**DK** Kun nogle få omgange**NE** Bare noen få omdreinger**FI** Vain muutama kierros**ET** Ainult mõni pööre**LV** Tikai daži apgriezieni**LT** Tik keli pasukimai**PL** Wystarczy kilka obrotów**RU** Только несколько оборотов**UK** Лише декілька обертів**BG** Само няколко завъртания**CS** Pouze několik otáček**SK** Len niekoľko otáčok**SL** Le nekaj obratov**HR/BiH** Samo nekoliko okreta**RO** Doar câteva rotiri**HU** Csak néhány fordítás**EL** Μόνο λίγες περιστροφές**TR** Yalnızca birkaç tur**AR** بعض دورات فقط**HE** רק מספר סיבובים**ZH** 仅几圈**JA** 2～3回転のみ**KO** 몇 번만 돌리면 됨**TH** เพียงสองสามรอบ**3**

x4

22 mm  x232 mm  x23 mm  x1**A****B**

2 Nm

