





# Thule Rapid System Kit 1508

# > Instructions

**FORD F-250/350**, 4-dr Super Cab, \*99–

**FORD F-250/350**, 4-dr Extra Cab, \*99–

\*North America

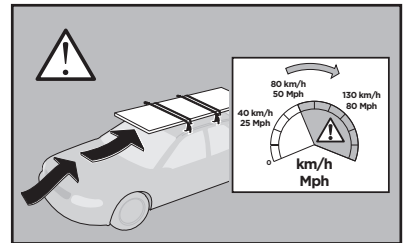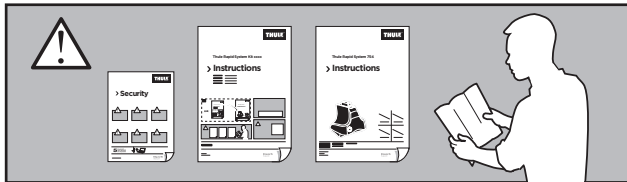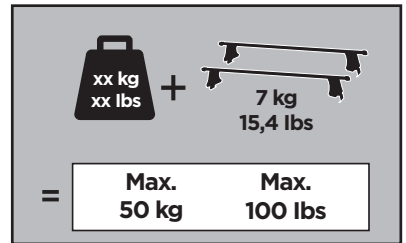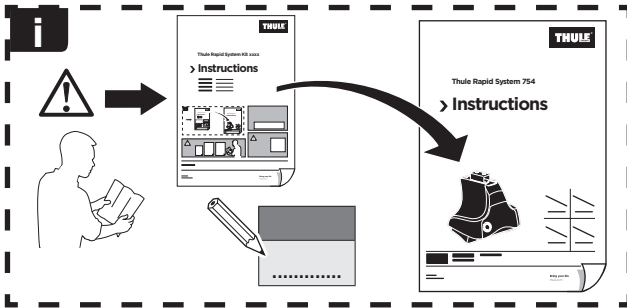


ISO 11154-E




x1

65 x4





1008 x4



x1

1

	X (scale)	X (mm)	X (inch)
<b>FORD F-250/350, 4-dr Super Cab, *99-</b>	<b>63,5</b>	<b>1286</b>	<b>50 1/2</b>
<b>FORD F-250/350, 4-dr Extra Cab, *99-</b>	<b>63,5</b>	<b>1286</b>	<b>50 1/2</b>

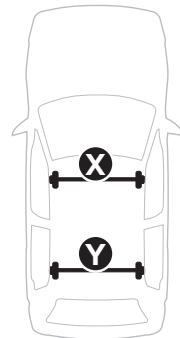
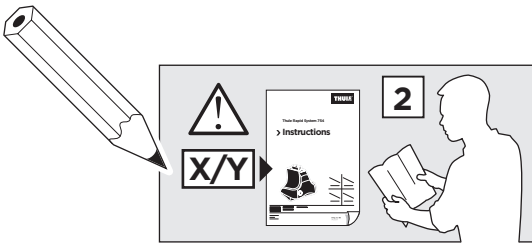



	Y (scale)	Y (mm)	Y (inch)
<b>FORD F-250/350, 4-dr Super Cab, *99-</b>	<b>63,5</b>	<b>1286</b>	<b>50 1/2</b>
<b>FORD F-250/350, 4-dr Extra Cab, *99-</b>	<b>63,5</b>	<b>1286</b>	<b>50 1/2</b>

**2**

**FORD F-250/350, 4-dr Super Cab, \*99-**

**FORD F-250/350, 4-dr Extra Cab, \*99-**

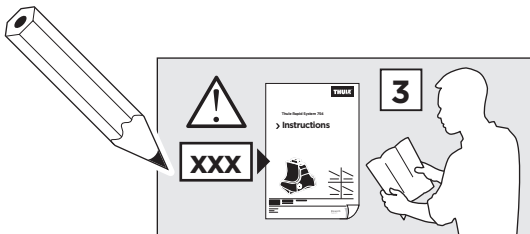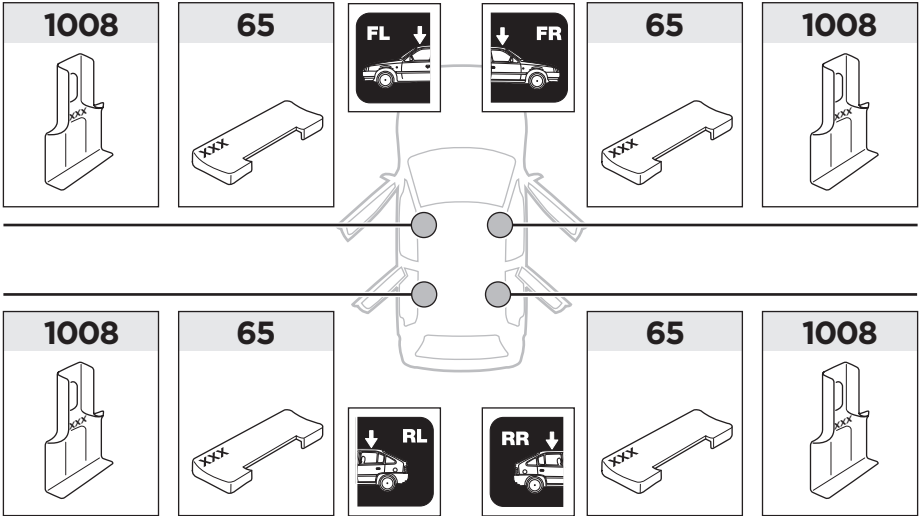

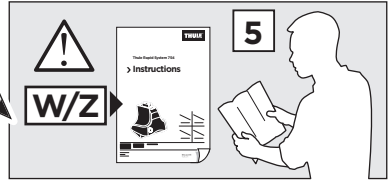**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>FORD F-250/350</b> , 4-dr Super Cab, *99-	<b>216</b>	<b>800</b>	<b>8 1/2</b>	<b>31 1/2</b>
<b>FORD F-250/350</b> , 4-dr Extra Cab, *99-	<b>216</b>	<b>800</b>	<b>8 1/2</b>	<b>31 1/2</b>

