
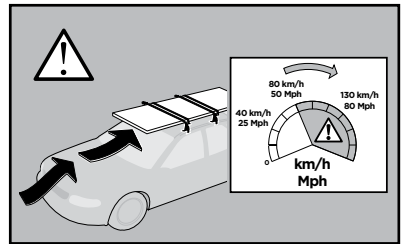
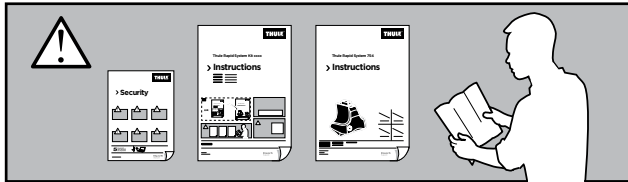
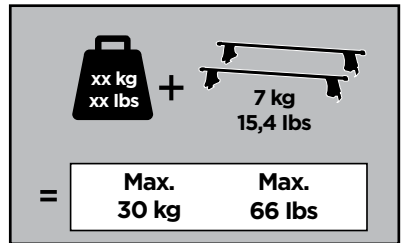


Thule Rapid System Kit 1336

> Instructions

NISSAN Cube, 5-dr MPV, 02-08 / *09-


*North America

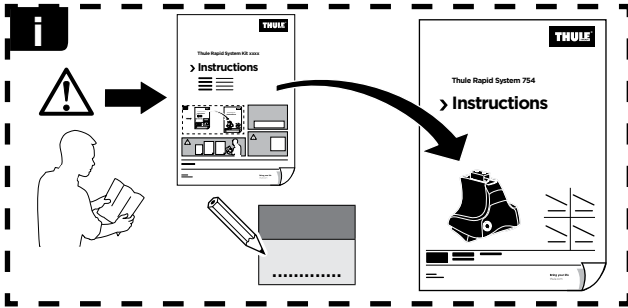

ISO 11154-E



171 x4




624 x2



x1






625 x2



x1

1



	X (scale)	X (mm)	X (inch)
NISSAN Cube, 5-dr MPV, 02-08 / *09-	64	1291	50 ⁷ / ₈

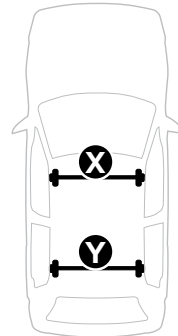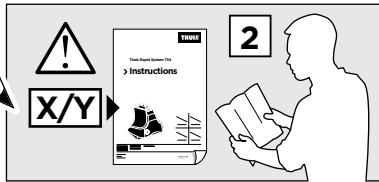
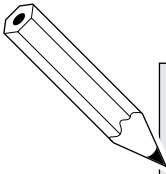


	Y (scale)	Y (mm)	Y (inch)
NISSAN Cube, 5-dr MPV, 02-08 / *09-	62,5	1276	50 ¹ / ₄

2

NISSAN Cube, 5-dr MPV, 02-08 / *09-

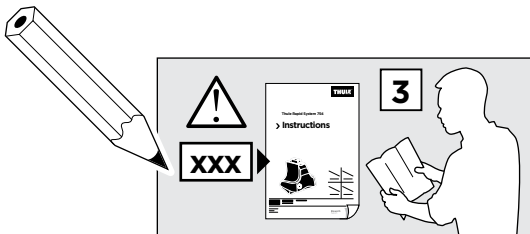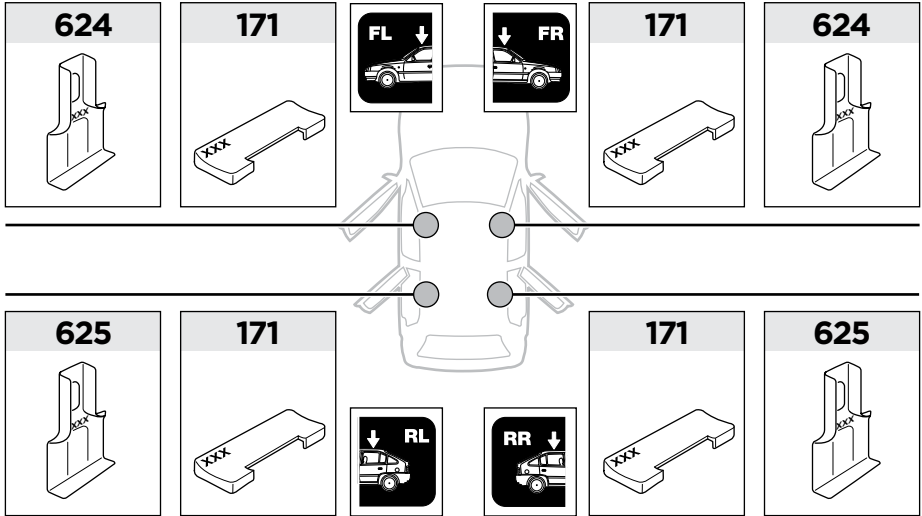

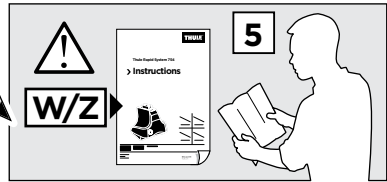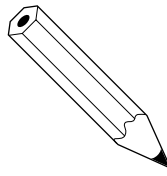3

	W (mm)	Z (mm)	W (inch)	Z (inch)
NISSAN Cube, 5-dr MPV, 02- / *09-	545	700	21 1/2	27 1/2

