





1

# Kit 145469

IM LS8, 5-dr SUV, 26-  
IM LS9, 5-dr SUV, 25-



x1




x1









x1



x1

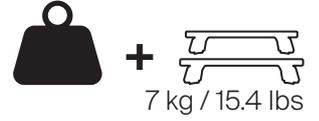

i

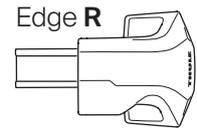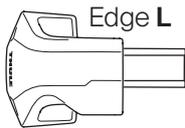


1




+





Edge

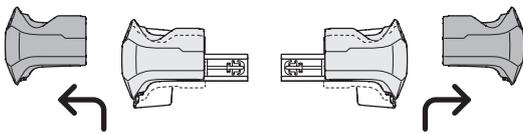



Edge

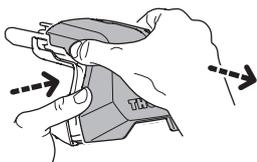



Evo

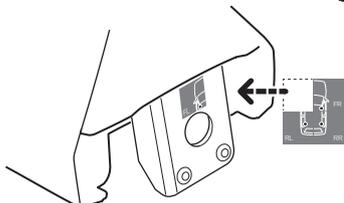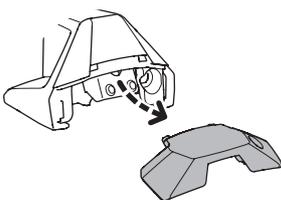

2

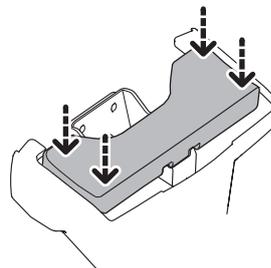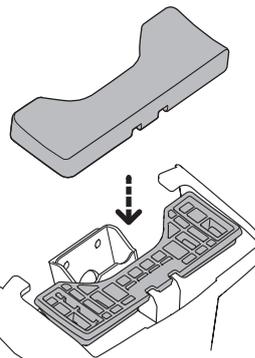


3

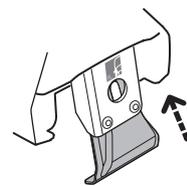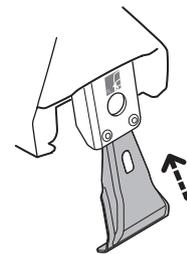


click

2




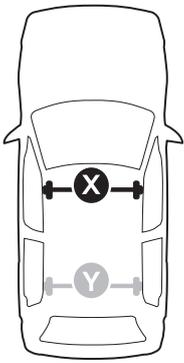

Thule WingBar Evo	Thule WingBar Edge	Thule SquareBar Evo	Evo X (scale)	Edge X (scale)
<b>IM LS8, 5-dr SUV, 26-</b>			<b>52</b>	<b>K</b>
<b>IM LS9, 5-dr SUV, 25-</b>			<b>51</b>	<b>M</b>
Thule ProBar Evo	Thule SlideBar Evo		X (mm/inch)	
<b>IM LS8, 5-dr SUV, 26-</b>			<b>1171 mm / 46 1/8"</b>	
<b>IM LS9, 5-dr SUV, 25-</b>			<b>1161 mm / 45 3/4"</b>	

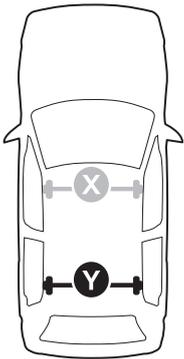

Thule WingBar Evo	Thule WingBar Edge	Thule SquareBar Evo	Evo Y (scale)	Edge Y (scale)
<b>IM LS8, 5-dr SUV, 26-</b>			<b>475</b>	<b>B</b>
<b>IM LS9, 5-dr SUV, 25-</b>			<b>46.5</b>	<b>D</b>
Thule ProBar Evo	Thule SlideBar Evo		Y (mm/inch)	
<b>IM LS8, 5-dr SUV, 26-</b>			<b>1126 mm / 44 3/8"</b>	
<b>IM LS9, 5-dr SUV, 25-</b>			<b>1116 mm / 43 7/8"</b>	

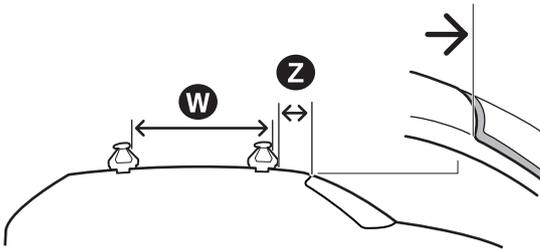

	W (mm/inch)	Z (mm/inch)
<b>IM LS8, 5-dr SUV, 26-</b>	<b>700 mm / 27 1/2"</b>	<b>350 mm / 13 3/4"</b>
<b>IM LS9, 5-dr SUV, 25-</b>	<b>700 mm / 27 1/2"</b>	<b>390 mm / 15 3/8"</b>

