

Thule Rapid System Kit 1586





> Instructions

PEUGEOT 206, 3-dr Hatchback, 98-08

PEUGEOT 206, 5-dr Hatchback, 98-08

PEUGEOT 206+, 3-dr Hatchback, 09-12

PEUGEOT 206+, 5-dr Hatchback, 09-12

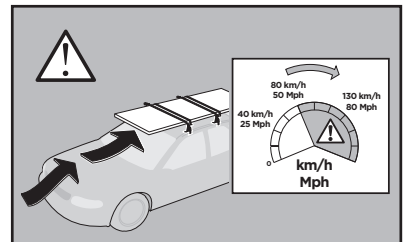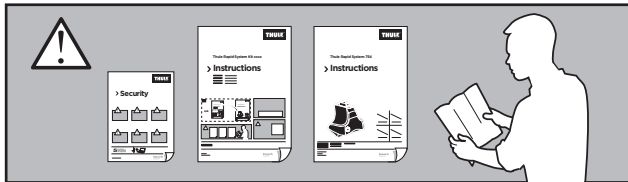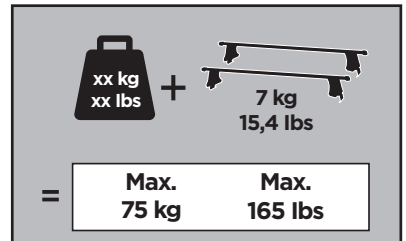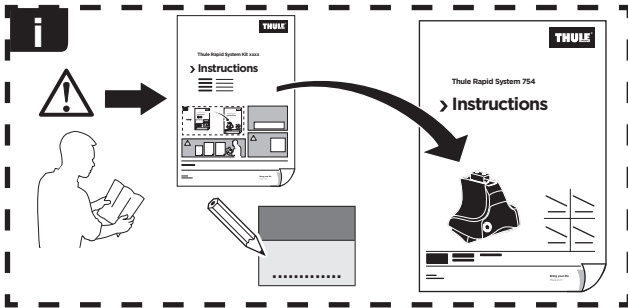


ISO 11154-E

141586



C.20141212
519-1586-02

Bring your life
thule.com

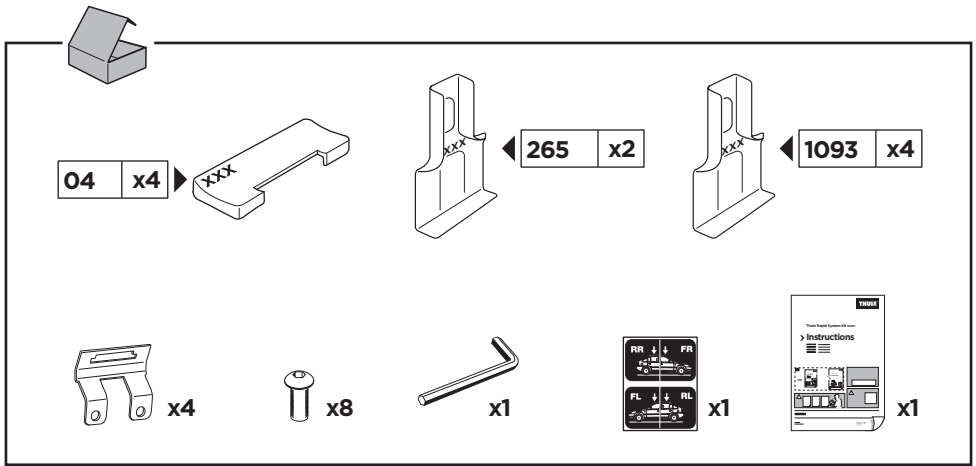



1

	X (scale)	X (mm)	X (inch)
PEUGEOT 206 , 3-dr Hatchback, 98-08	26	911	35 ⁷ / ₈
PEUGEOT 206 , 5-dr Hatchback, 98-08	26	911	35 ⁷ / ₈
PEUGEOT 206+ , 3-dr Hatchback, 09-12	26	911	35 ⁷ / ₈
PEUGEOT 206+ , 5-dr Hatchback, 09-12	26	911	35 ⁷ / ₈

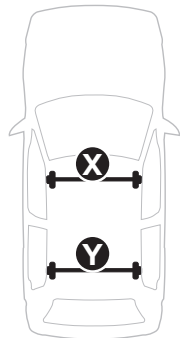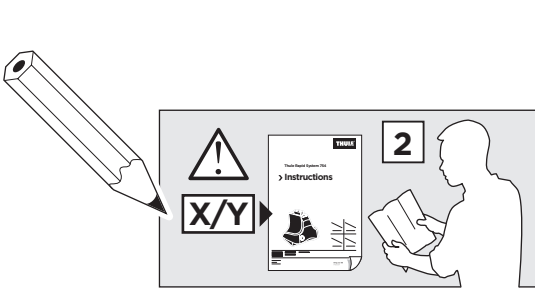



	Y (scale)	Y (mm)	Y (inch)
PEUGEOT 206 , 3-dr Hatchback, 98-08	26	911	35 ⁷ / ₈
PEUGEOT 206 , 5-dr Hatchback, 98-08	24,5	896	35 ¹ / ₄
PEUGEOT 206+ , 3-dr Hatchback, 09-12	26	911	35 ⁷ / ₈
PEUGEOT 206+ , 5-dr Hatchback, 09-12	24,5	896	35 ¹ / ₄

2

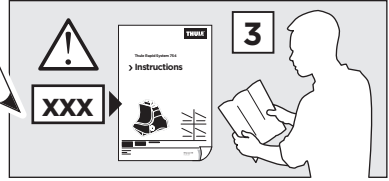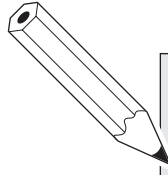



PEUGEOT 206, 3-dr Hatchback, 98-08


PEUGEOT 206+, 3-dr Hatchback, 09-12

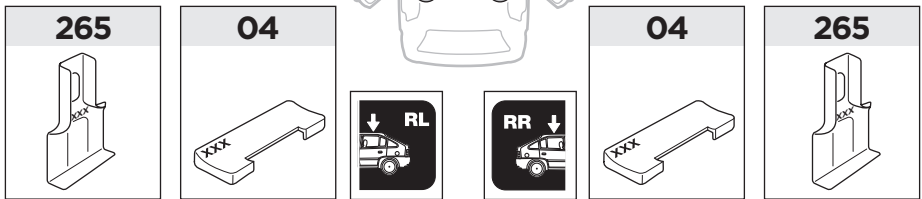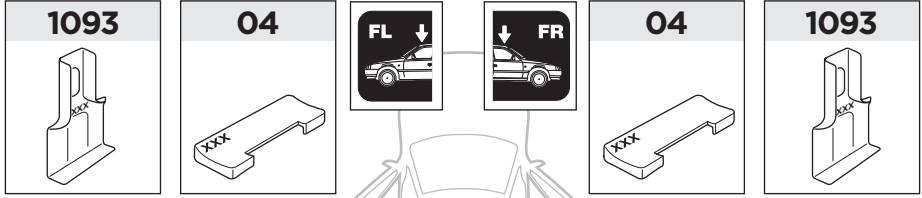





PEUGEOT 206, 5-dr Hatchback, 98-08

PEUGEOT 206+, 5-dr Hatchback, 09-12


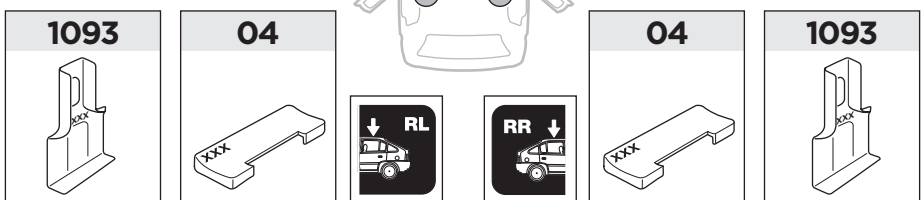
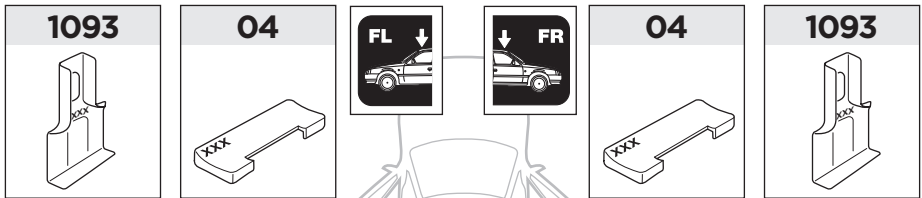


3


PEUGEOT 206, 3-dr Hatchback, 98-08
PEUGEOT 206+, 3-dr Hatchback, 09-12

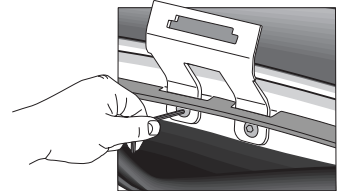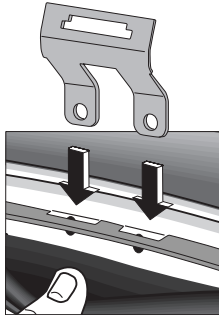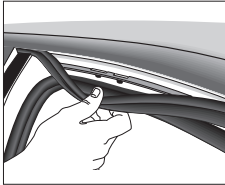**x2****x4****x1****6 Nm**

PEUGEOT 206, 5-dr Hatchback, 98-08
PEUGEOT 206+, 5-dr Hatchback, 09-12

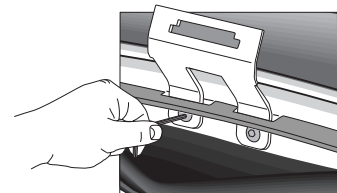
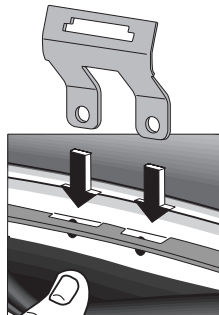
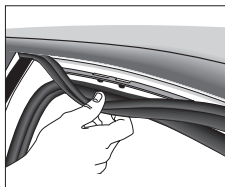
**x4****x8****x1****6 Nm**

4


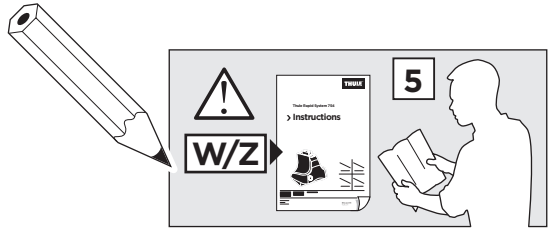


	W (mm)	Z (mm)	W (inch)	Z (inch)
PEUGEOT 206 , 3-dr Hatchback, 98-08	i*	700	i*	27 1/2
PEUGEOT 206+ , 3-dr Hatchback, 09-12	i*	700	i*	27 1/2

i* = information

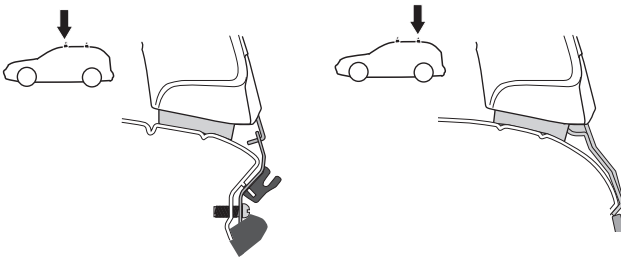
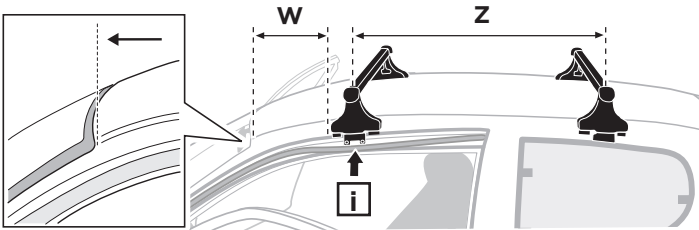
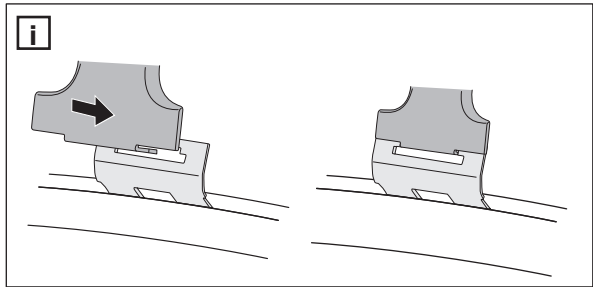


4

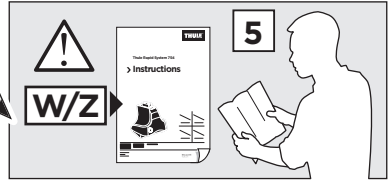
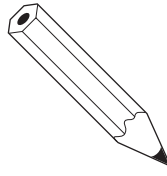


	W (mm)	Z (mm)	W (inch)	Z (inch)
PEUGEOT 206 , 5-dr Hatchback, 98-08	i*	i*	i*	i*
PEUGEOT 206+ , 5-dr Hatchback, 09-12	i*	i*	i*	i*

i* = information

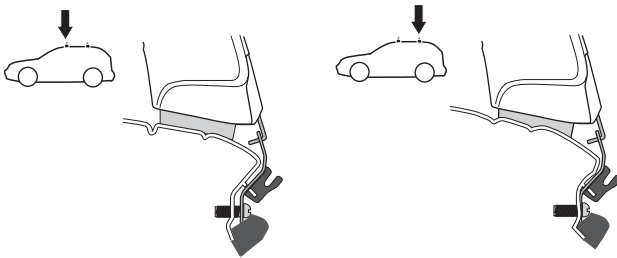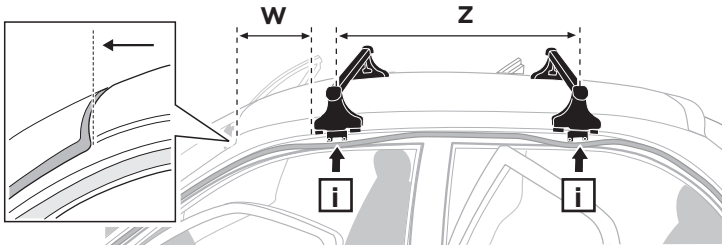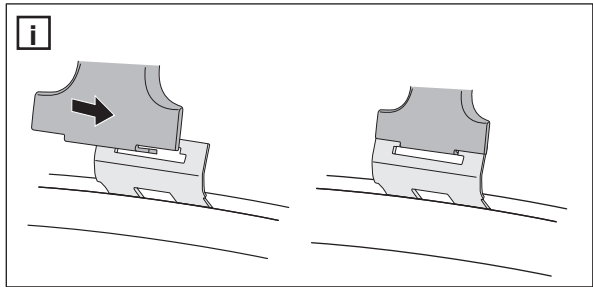

i

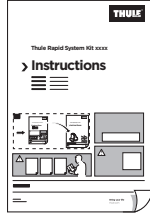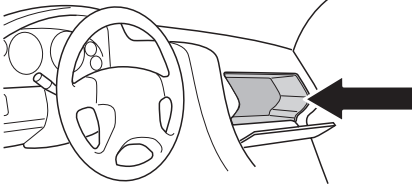

+

