






Thule Rapid System Kit 1256

> Instructions

TOYOTA Noah, 5-dr MPV, 01-


TOYOTA Voxy, 5-dr MPV, 01- (Asia)

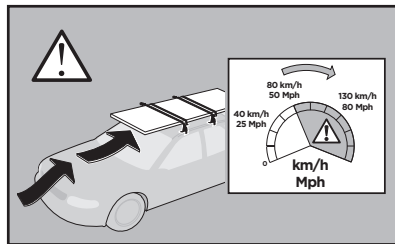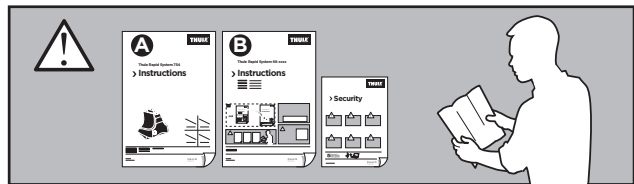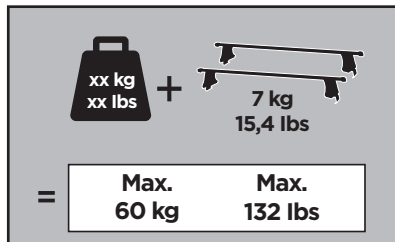

ISO 11154-E


141256
C.20130619
519-1256-02

Bring your life
thule.com

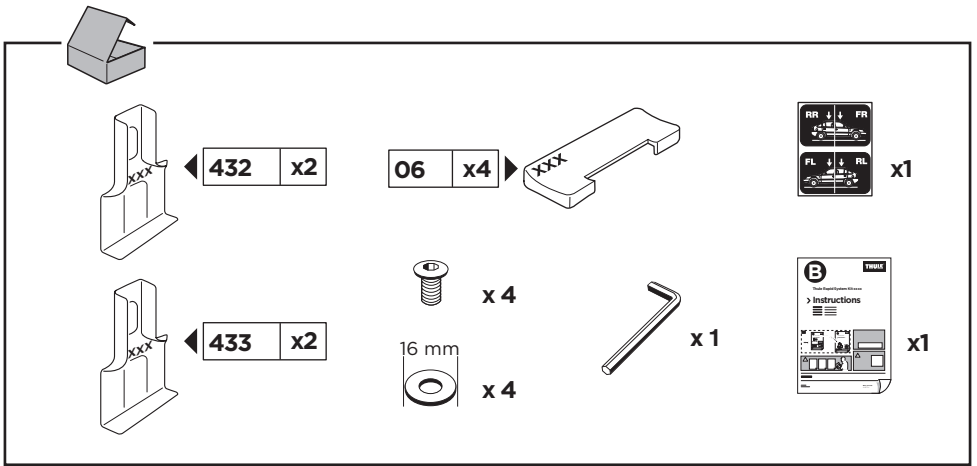

1


	X (scale)	X (mm)	X (inch)
TOYOTA Noah , 5-dr MPV, 01-	35	1001	39 ³ / ₈
TOYOTA Voxy , 5-dr MPV, 01- (Asia)	35	1001	39 ³ / ₈

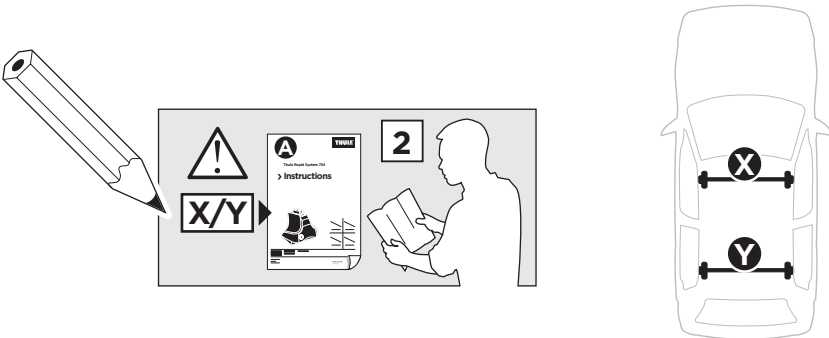

	Y (scale)	Y (mm)	Y (inch)
TOYOTA Noah , 5-dr MPV, 01-	33,5	986	38 ⁷ / ₈
TOYOTA Voxy , 5-dr MPV, 01- (Asia)	33,5	986	38 ⁷ / ₈


2

TOYOTA Noah, 5-dr MPV, 01-
TOYOTA Voxy, 5-dr MPV, 01- (Asia)

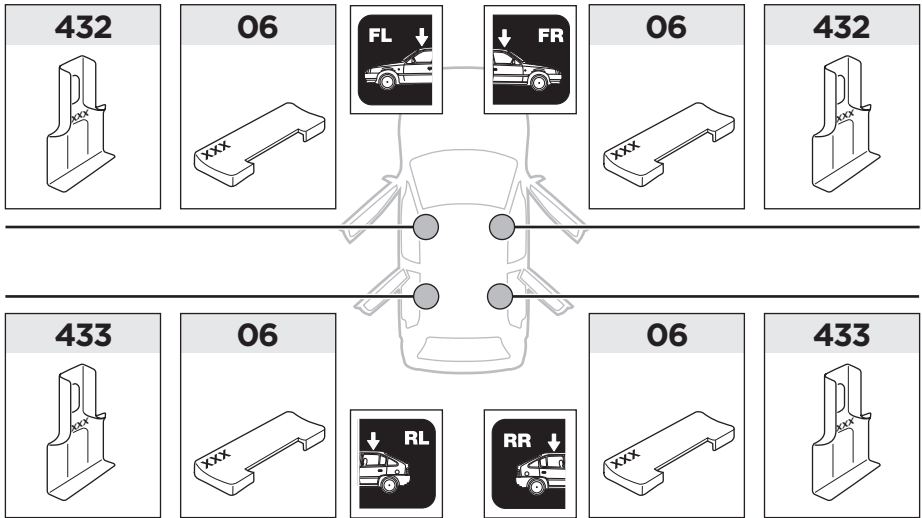

3

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Noah , 5-dr MPV, 01-	190	650	7 1/2	25 5/8
TOYOTA Voxy , 5-dr MPV, 01- (Asia)	190	650	7 1/2	25 5/8

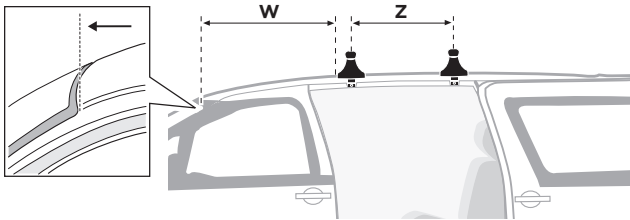**x 1****x 4****x 4**