
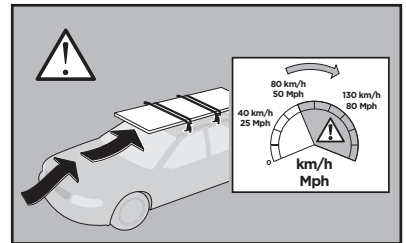
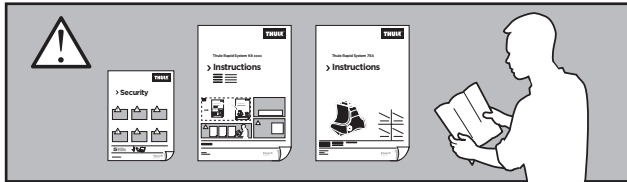
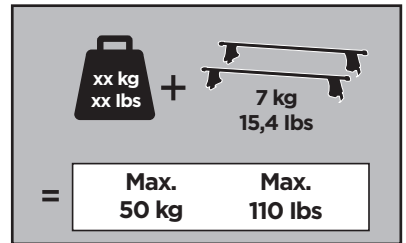


# Thule Rapid System Kit 1356

# > Instructions



MITSUBISHI Colt, 5-dr Hatchback, 04-12

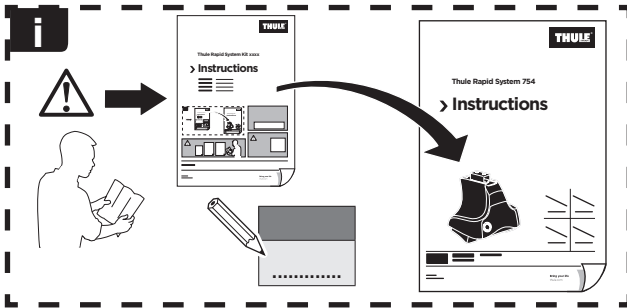


ISO 11154-E

**141356**  
C.20160711  
519-1356-03

**Bring your life**  
thule.com

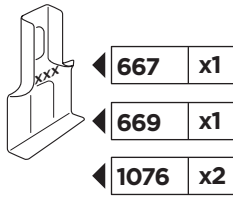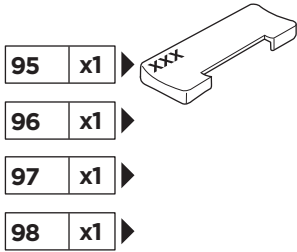



x1



x1

# 1


	X (scale)	X (mm)	X (inch)
<b>MITSUBISHI Colt, 5-dr Hatchback, 04-12</b>	<b>37,5</b>	<b>1026</b>	<b>40 <sup>3</sup>/<sub>8</sub></b>

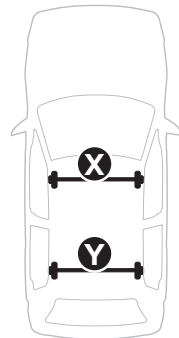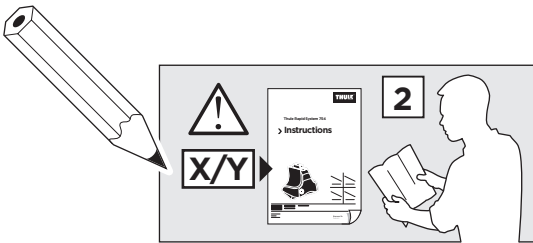


	Y (scale)	Y (mm)	Y (inch)
<b>MITSUBISHI Colt, 5-dr Hatchback, 04-12</b>	<b>33,5</b>	<b>986</b>	<b>38 <sup>7</sup>/<sub>8</sub></b>

2

MITSUBISHI Colt, 5-dr Hatchback, 04-12

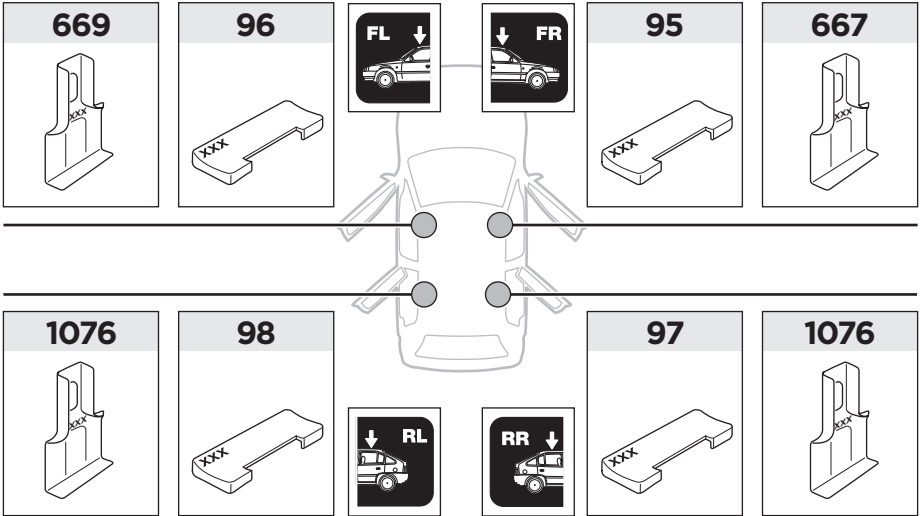

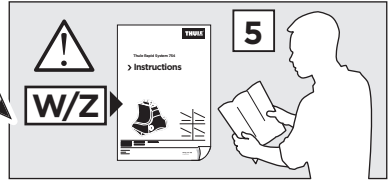**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>MITSUBISHI Colt, 5-dr Hatchback, 04-12</b>	<b>345</b>	<b>700</b>	<b>13 <sup>5</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

