

Technical information


To determine which Thule Xscape Molle Panel fits your vehicle:

Measure crossbar spread:


- Measure the distance from the center of your vehicle's front crossbar to the center of the rear crossbar.
- Use this crossbar spread to reference the fitment chart below.

If deciding before purchase:

- Inspect the underside of your truck bed rail to identify where the uprights will be installed.
- Find the outside edge measurement of the uprights.
- Subtract **7.6"/194 mm** from this measurement to calculate your crossbar spread.
- Use this crossbar spread to reference the fitment chart below.

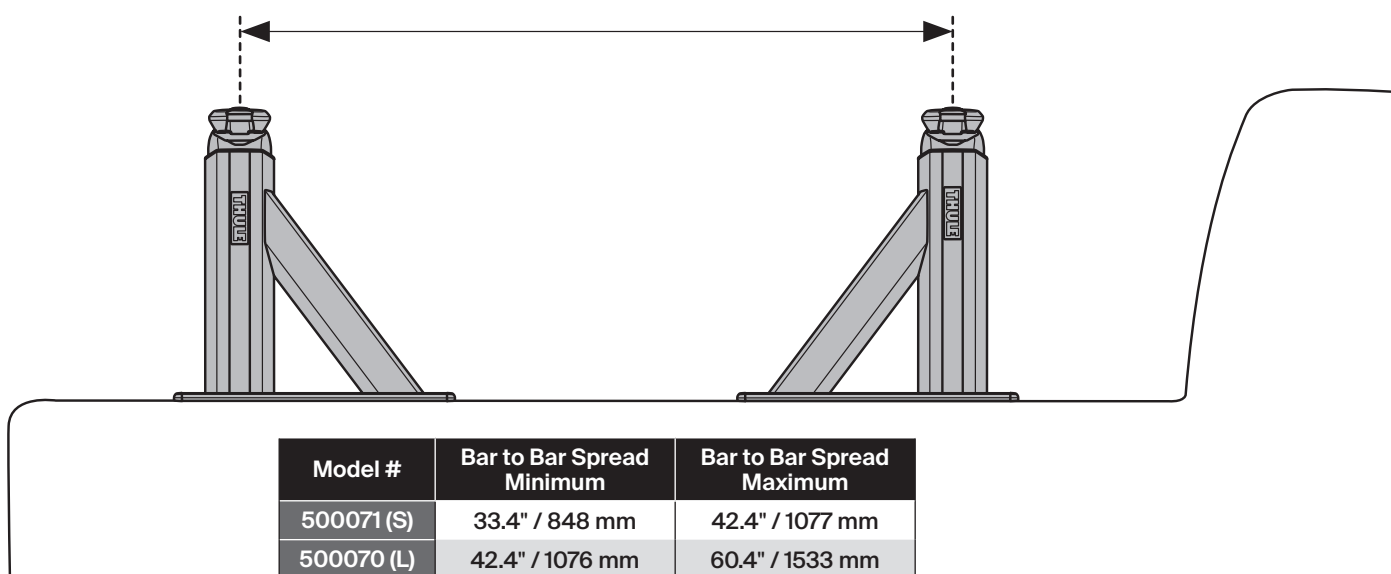

Model #	X Minimum	X Maximum
500071 (S)	29.625" / 754.1 mm	38.75" / 983 mm
500070 (L)	38.75" / 983 mm	56.625" / 1440 mm

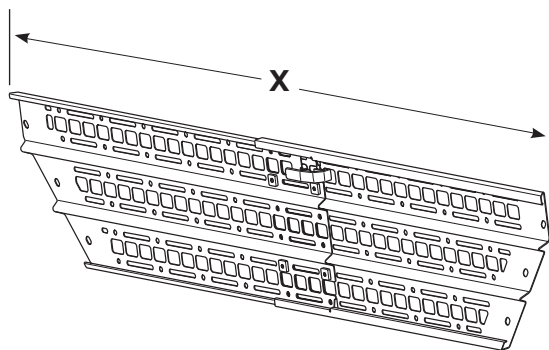

Recommended upper mounting hole spacing (X)	
500071 (S)	500070 (L)
37" / 940 mm	54.5" / 1384 mm
32.5" / 825.5 mm	50" / 1270 mm
28" / 711 mm	45.5" / 1156 mm
	41" / 1041.5 mm
	36.5" / 927 mm

