



# > Instructions

Thule Xscape fit kit for tonneau covers  
500107

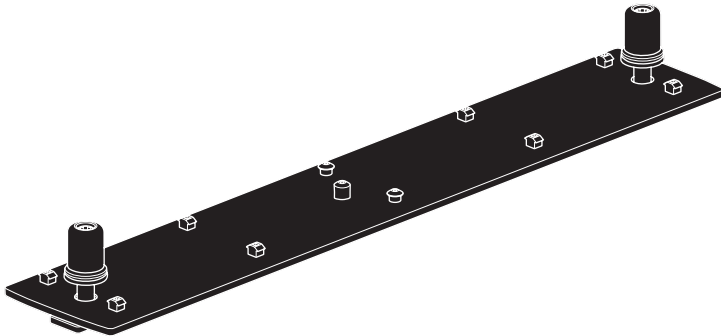



**1**  
KIT




+

**2**  
FOOT PACK



**1**  
KIT

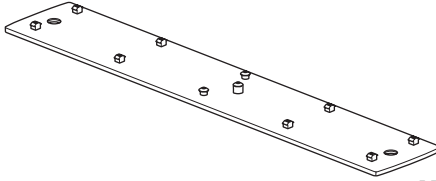

x 4



THULE

Instructions



THULE

Safety

Pace Edwards  
Ultragroove Series  
and Embark LS



RealTruck  
RetraxPRO XR

Roll-N-Lock A series XT  
Roll-N-Lock E series XT  
Roll-N-Lock M series XT



x 8



x 8





x 8




x 8

**1**



**1**  
KIT + **2**  
FOOT PACK



x 4

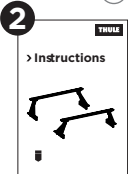

**1**

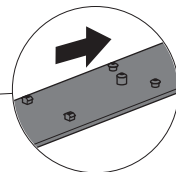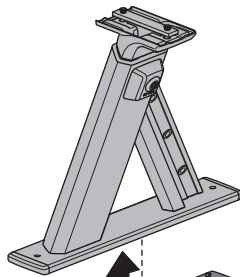


x 4

**i**


Pace Edwards  
Ultragroove Series  
and Embark LS

**#1**

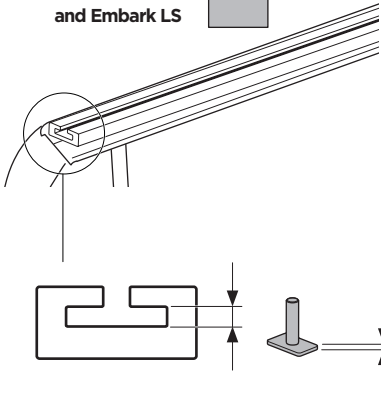


RealTruck  
RetraxPRO XR  
Roll-N-Lock A series XT  
Roll-N-Lock E series XT  
Roll-N-Lock M series XT

**#2**

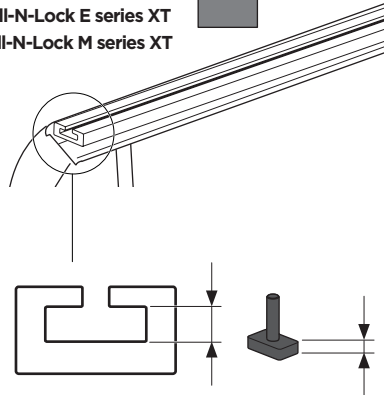


**2**

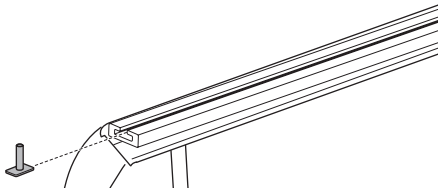




**x 8**

**3**

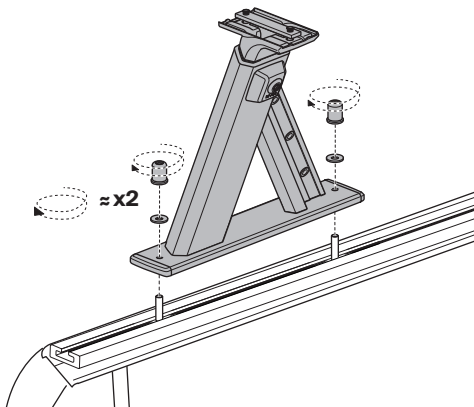

**x 8**

**i**

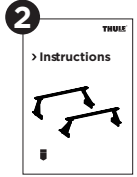
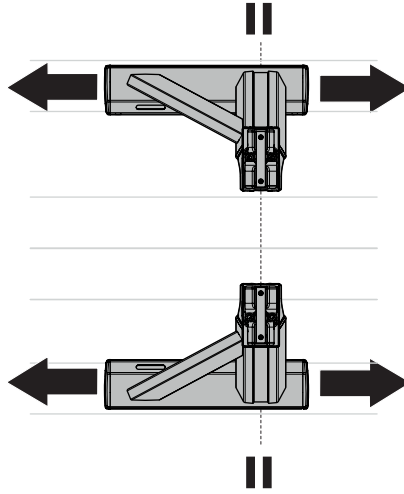



**2**



**x 2**

**4**

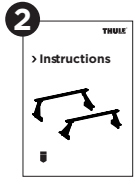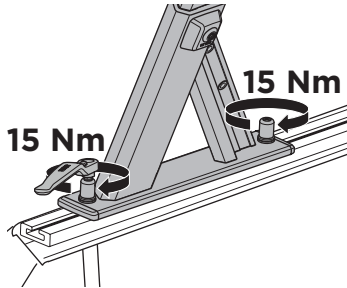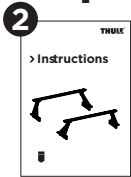

**7**



**x 8**



**500 km/310 Miles** →

