







1

Kit 187194



FORD Tourneo Custom (Mk. II), 5-dr Bus, 24-
FORD Transit Custom (Mk. II), 4/5-dr Van, 24-
VOLKSWAGEN Caravelle (T7), 4/5-dr Bus, 25-
VOLKSWAGEN Transporter (T7), 4/5-dr Van, 25-




This kit is only for vehicles with fixpoint mounting without glass roof.

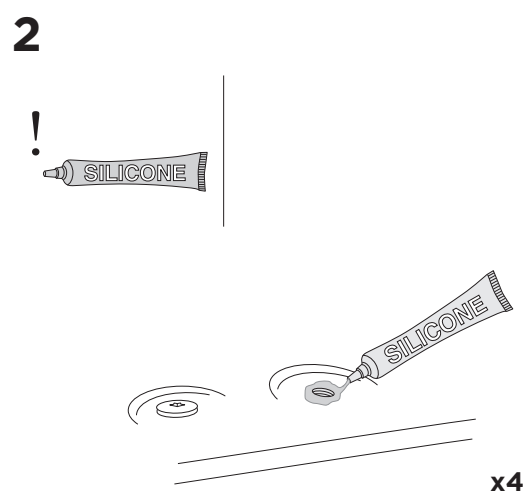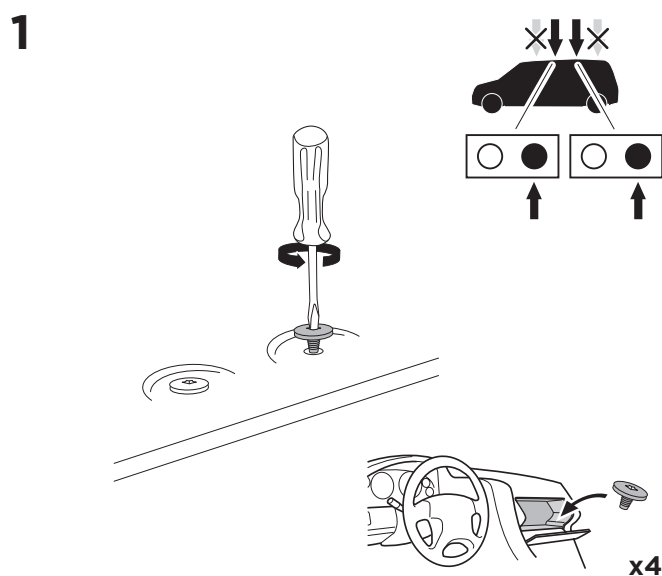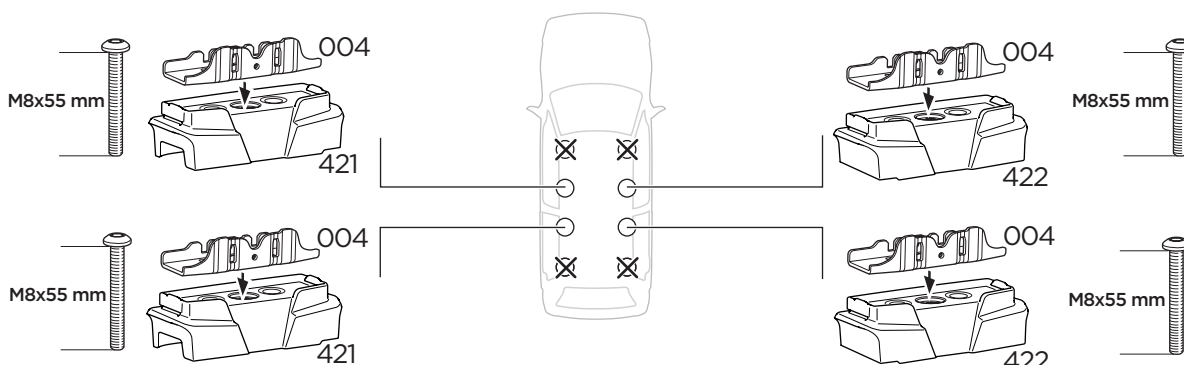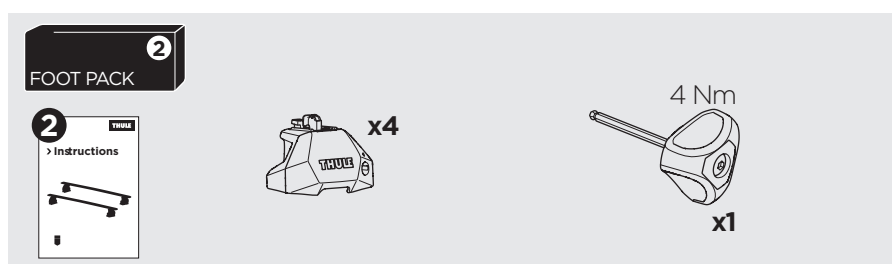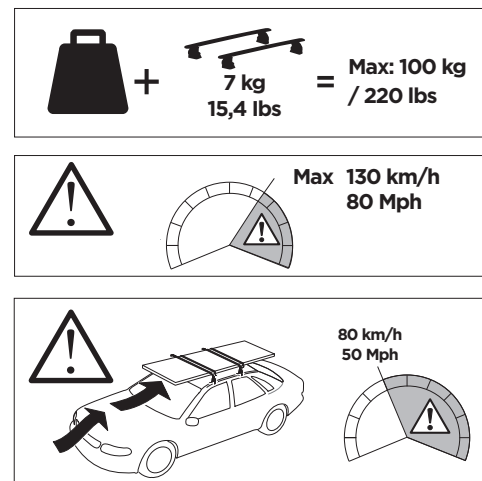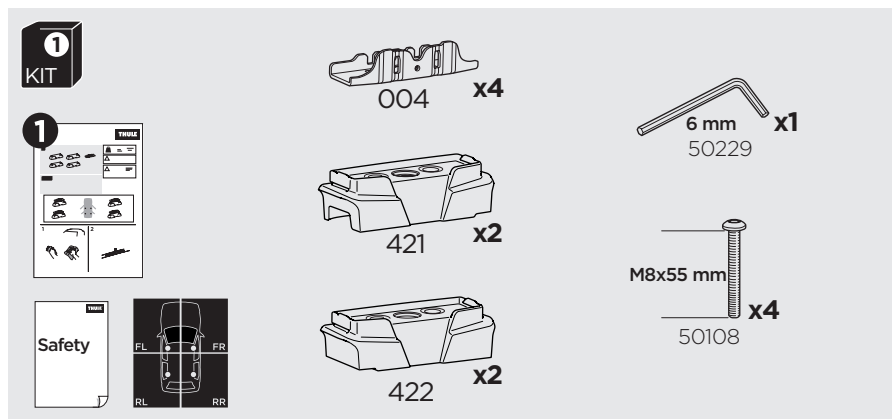


3

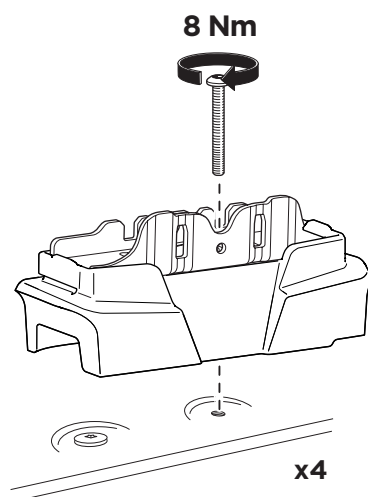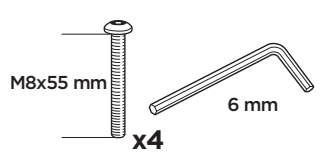

A

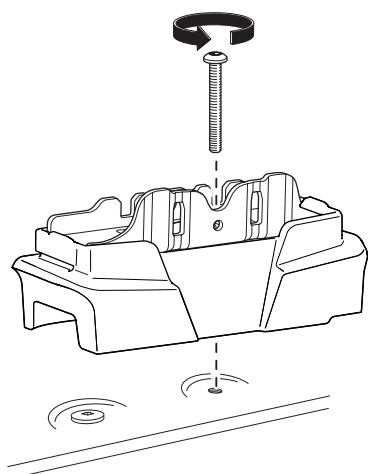

B

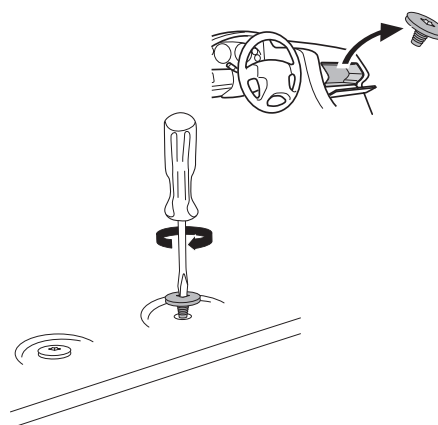

i

