
INSTALLATION

› Instructions

Thule Adapter Roof without OE Track Mercedes Sprinter > 2007 VW Crafter 2007 - 2016


301685

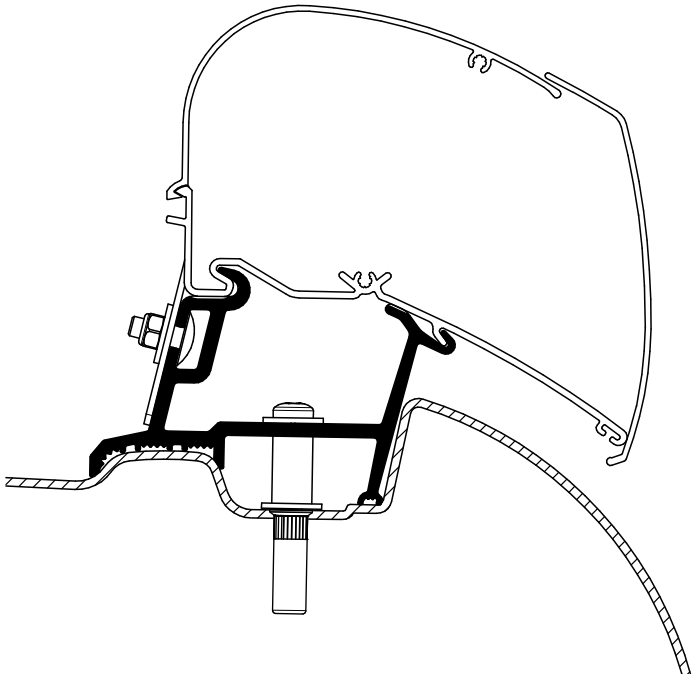


ADR916-03 | 3380050300
2026-01-19

Bring your life
thule.com

WARNINGS & INFO

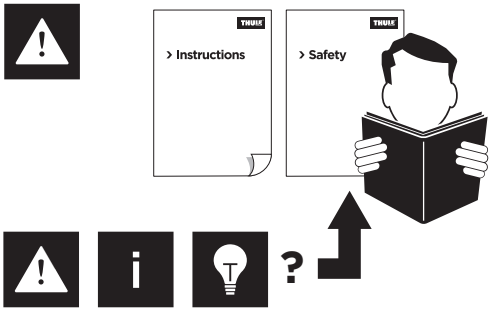

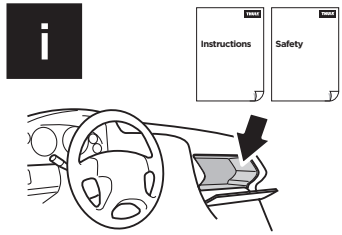


OK


NOT OK









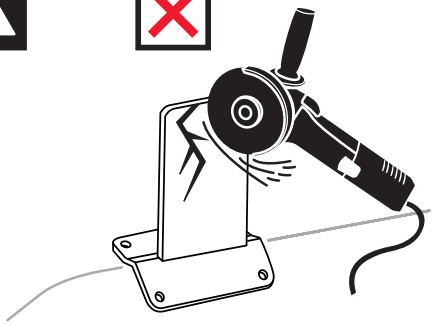


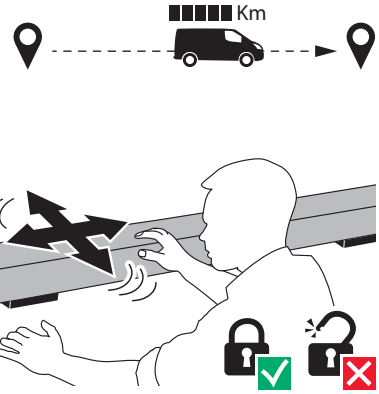

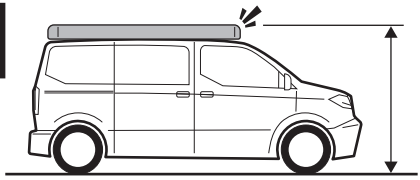


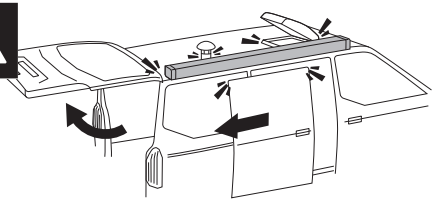

CONTENT

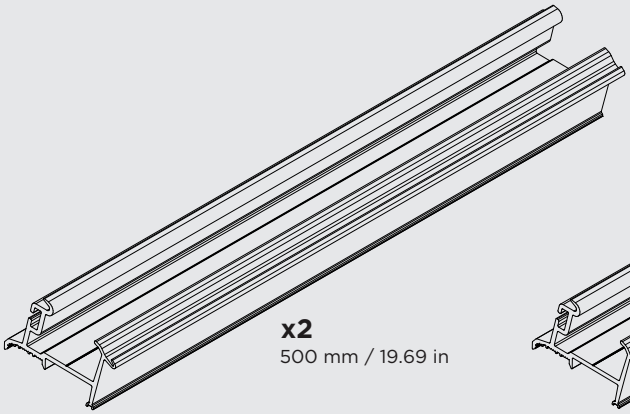

x2
500 mm / 19.69 in

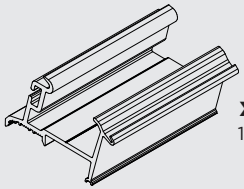

x2
125 mm / 4.92 in




x5
M6
DIN 985




x13
M6
DIN 9021



x5
M6 x 16 mm
DIN 603




x4
M6 x 10 x 30
Blind rivet nut
closed + PVC sealing



x5




x4
6,2 x 15 mm
Spacer Ø10




x4
M6 x 25 mm
DIN 7985 - TX30
A2

TOOLS

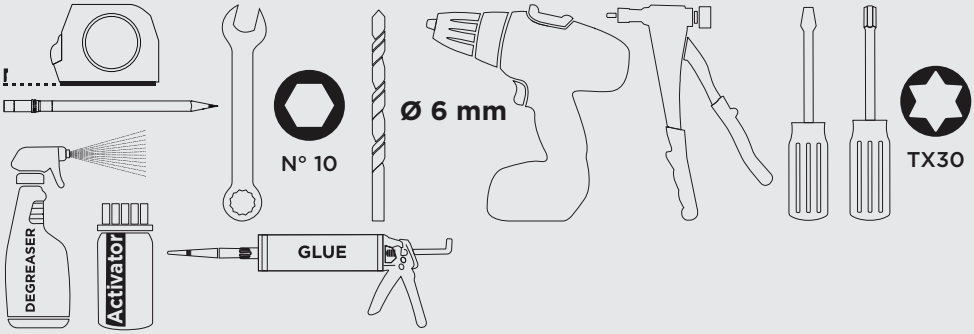



i RIGHT HAND DRIVE (RHD) is **MIRROR** of LEFT HAND DRIVE (LHD)

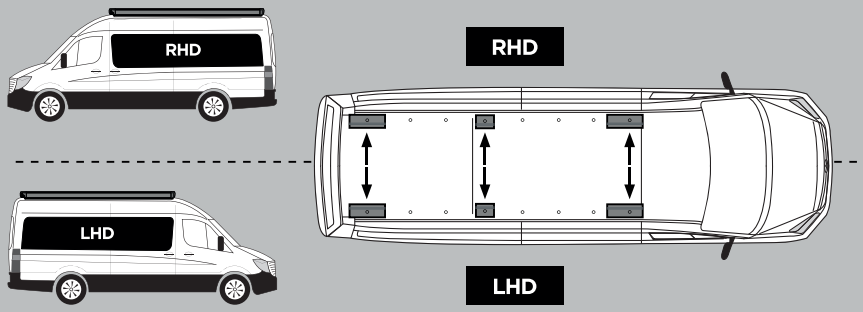

! IN THIS MANUAL **LEFT HAND DRIVE (LHD)** IS SHOWN BY **DEFAULT**


L2H2

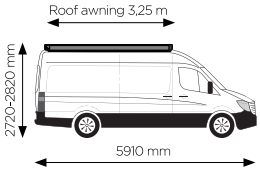


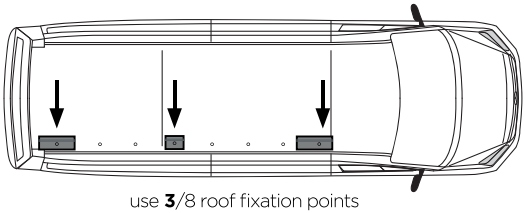

use **3**/8 roof fixation points


L3H2

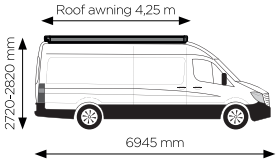


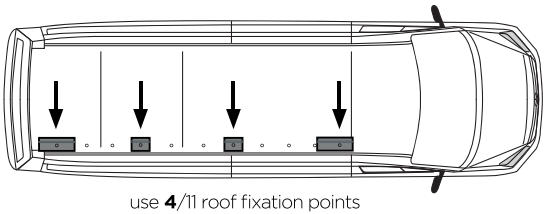

use **4**/11 roof fixation points


L4H2

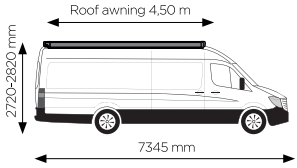


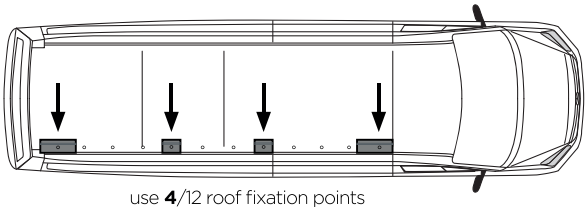

use **4**/12 roof fixation points

RHD IS MIRROR OF LHD

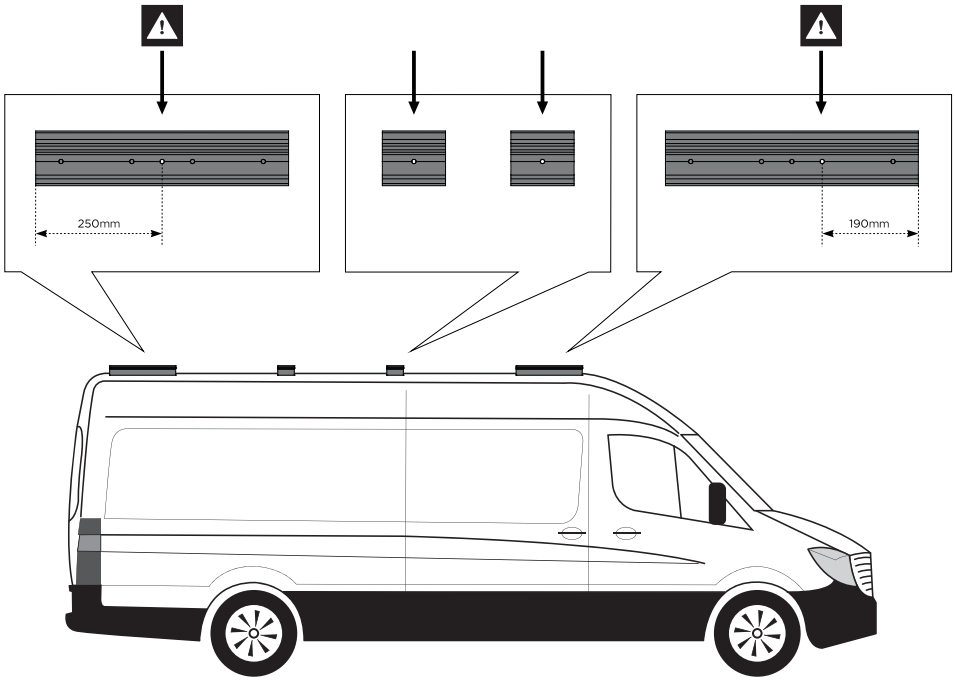


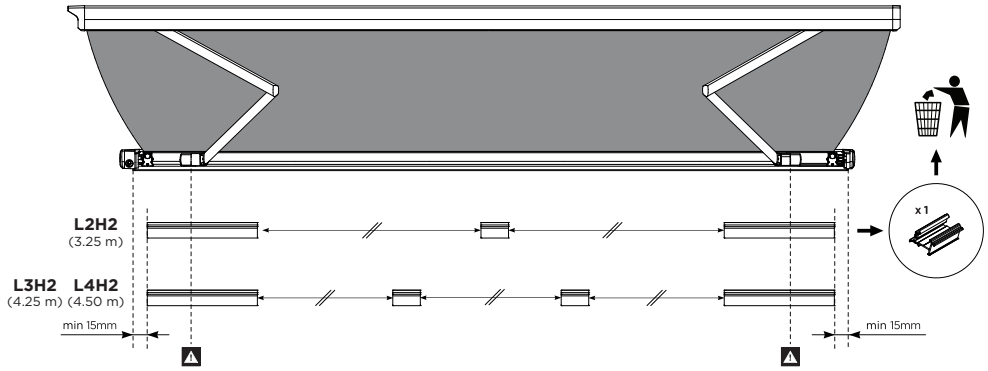


1



L4H2

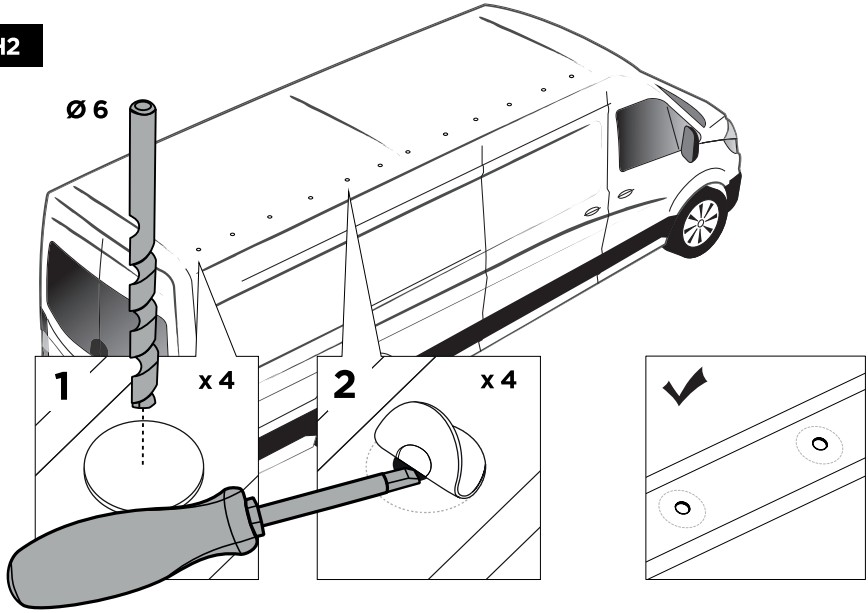


2

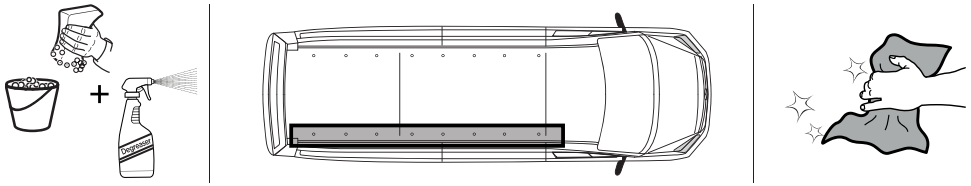


3





A

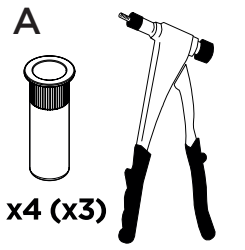

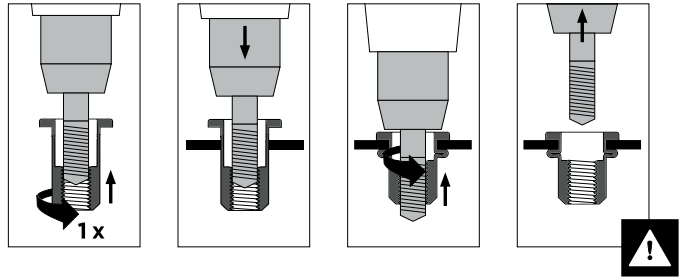

B

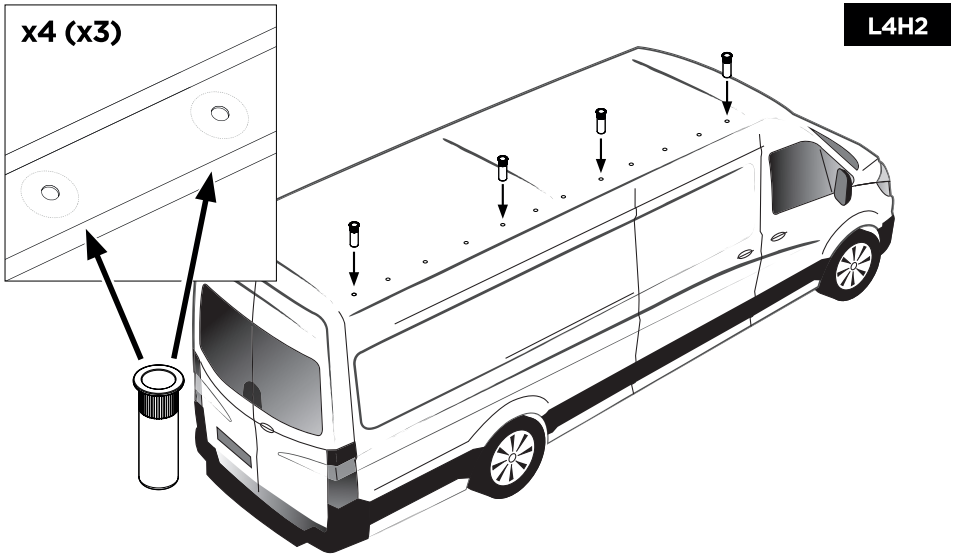


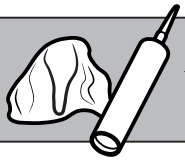



Glue / Lijmen / Verklebung:
Thule recommends / beveelt aan / empfehlt: **SIKA 252 or Terostat MS937**
Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.
Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.
Preparation and sealing according to the prescripts of the glue supplier.



4




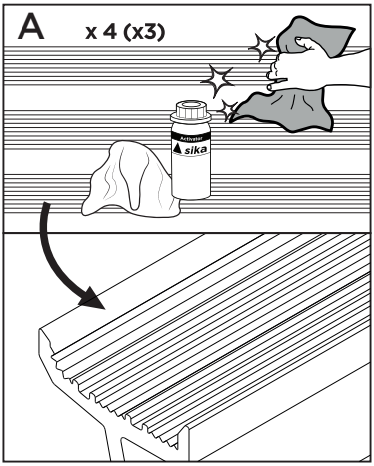

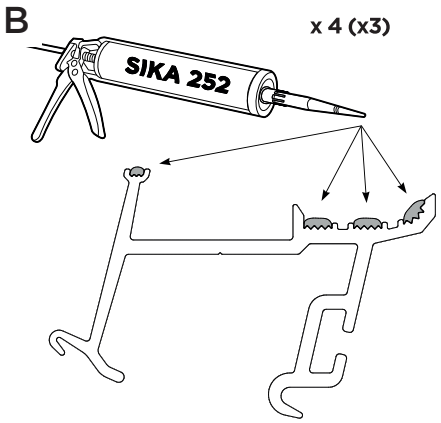


5



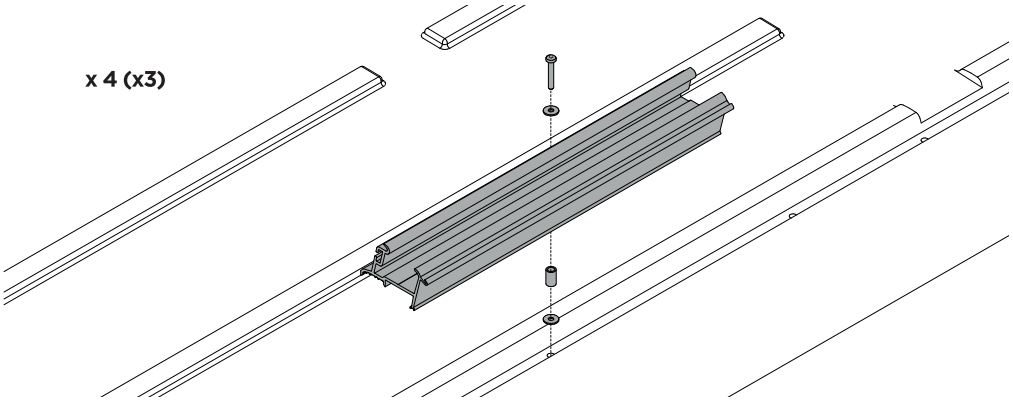



6




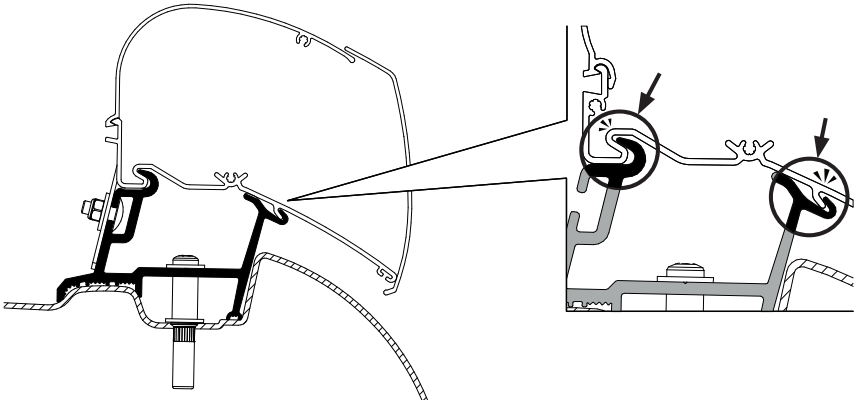

7



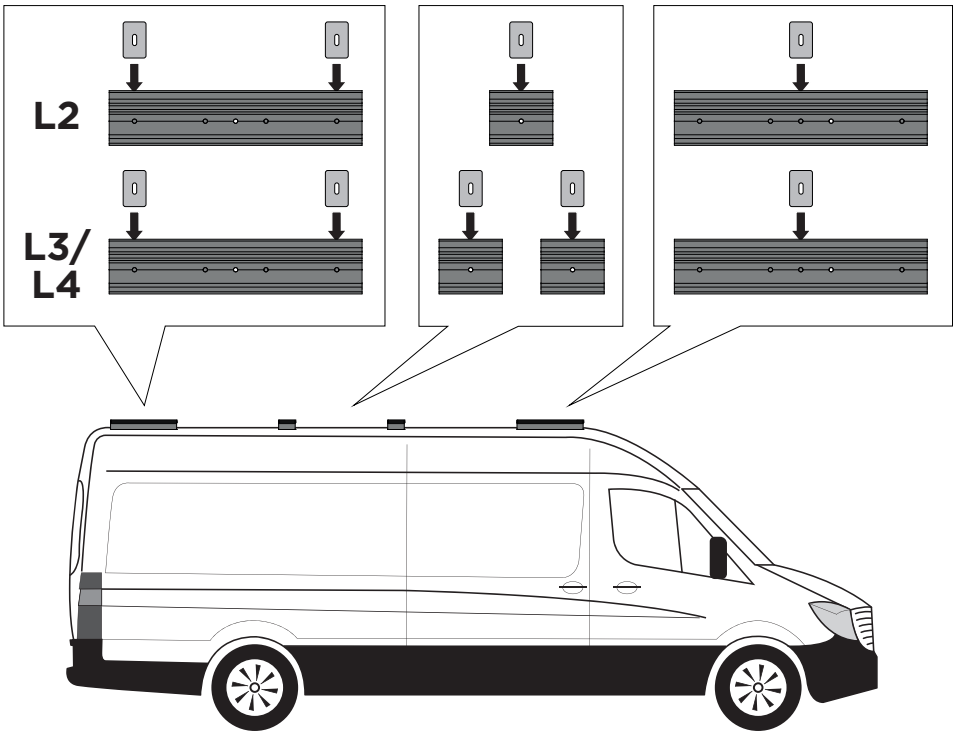

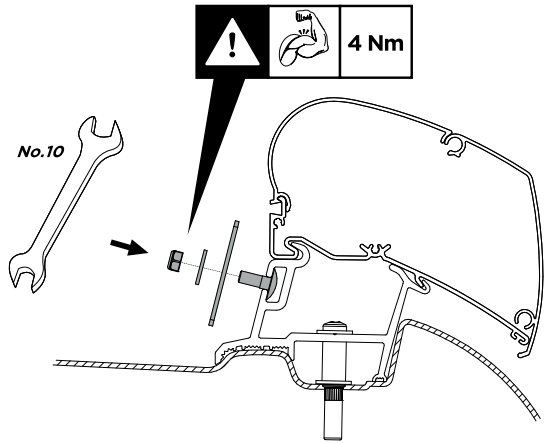



Thule NV
Kortrijkstraat 343
8930 Menen, Belgium
support.thule.com/s/contactsupport
www.thule.com

© Thule Group 2026. All rights reserved.