

1

Kit 186130

CHEVROLET Suburban, 5-dr SUV, 15-20
 CHEVROLET Tahoe, 5-dr SUV, 15-20
 CHEVROLET Trailblazer, 5-dr SUV, 13- / *12-20
 GMC Yukon, 5-dr SUV, 15-20










*North America

GMC Yukon Denali, 5-dr SUV, 15-20
 GMC Yukon XL, 5-dr SUV, 15-20
 HOLDEN Colorado 7, 5-dr SUV, 12-16
 HOLDEN Trailblazer, 5-dr SUV, 17-20



ISO 11154-E


This kit is only for vehicles with flush railing.

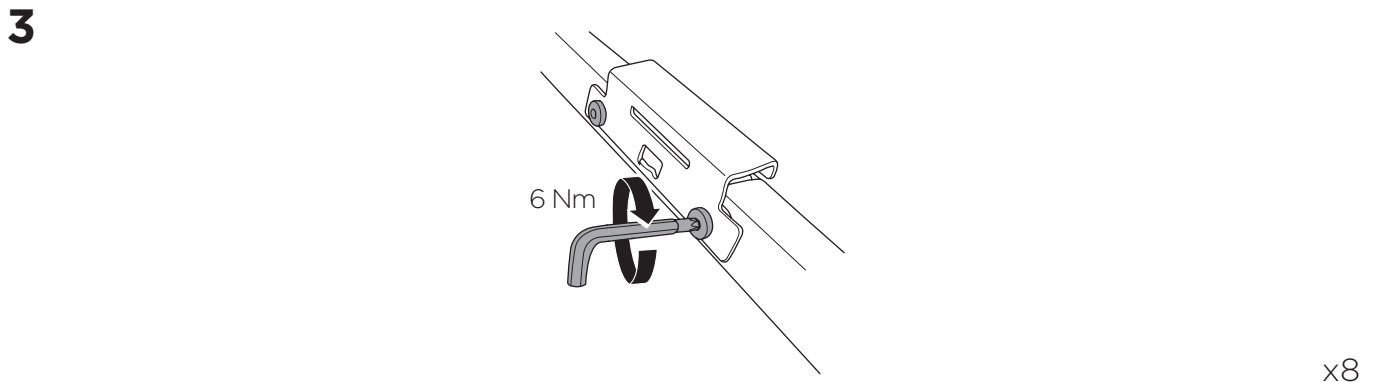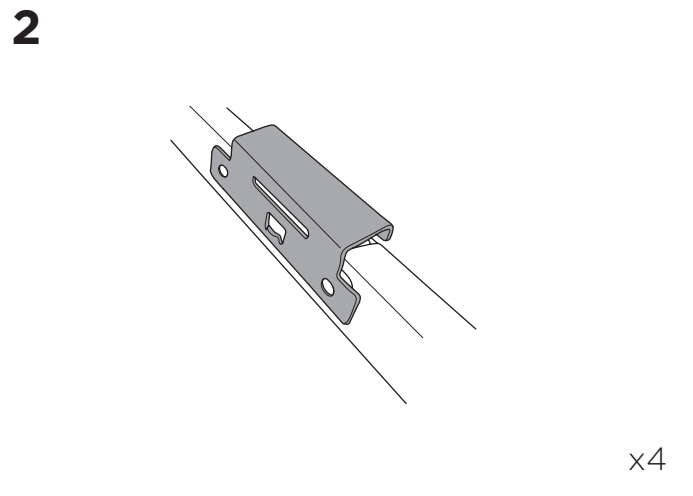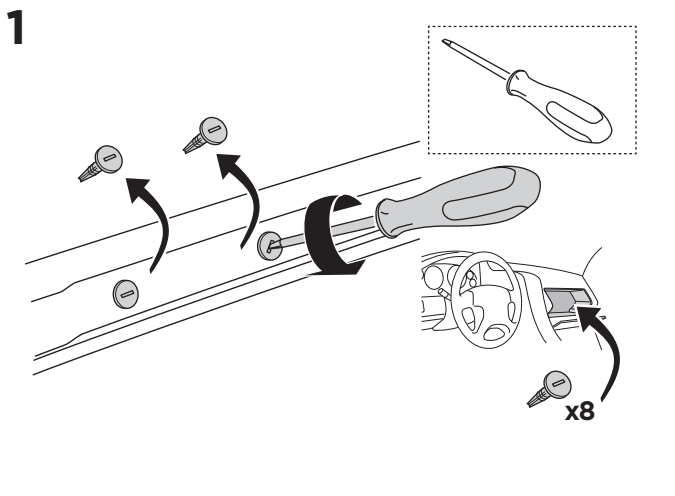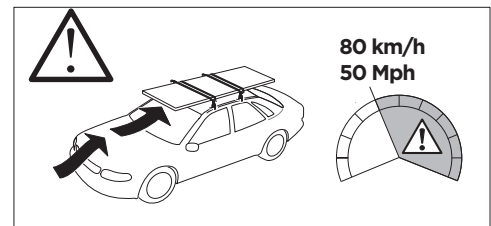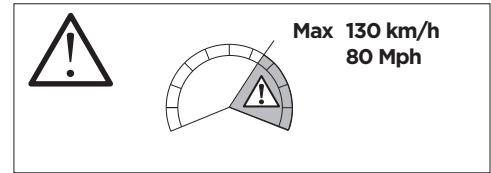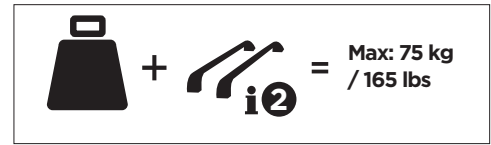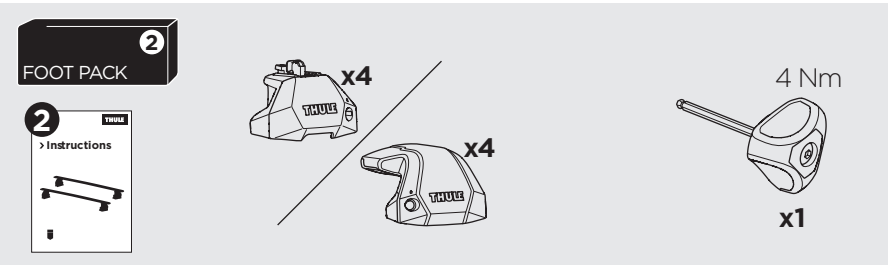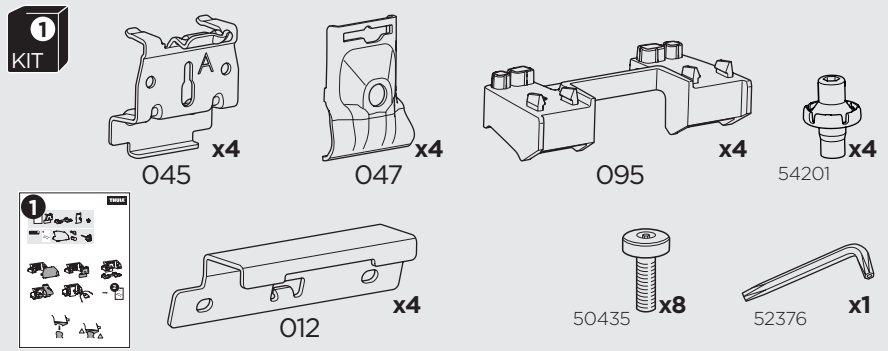


1 KIT + **2** FOOT PACK

1


Evo

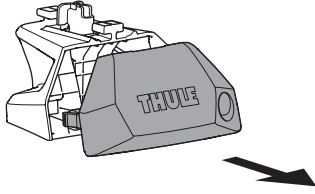


Edge

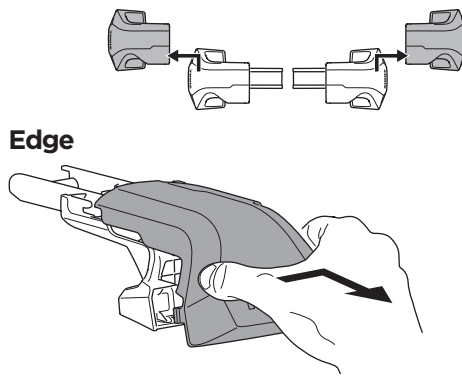


2

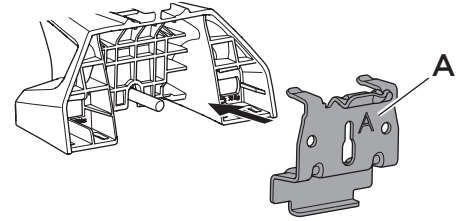


3

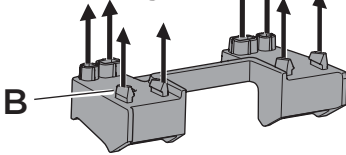

4

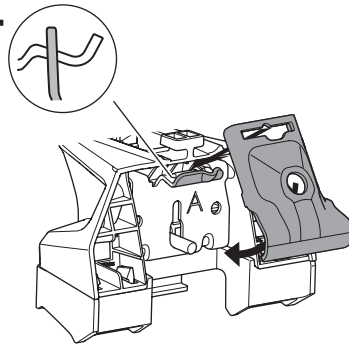


5

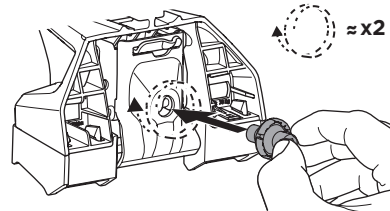

2 THULE

> Instructions



2

